




What Colour is the Warning Lamp?
Click on a colour to continue.

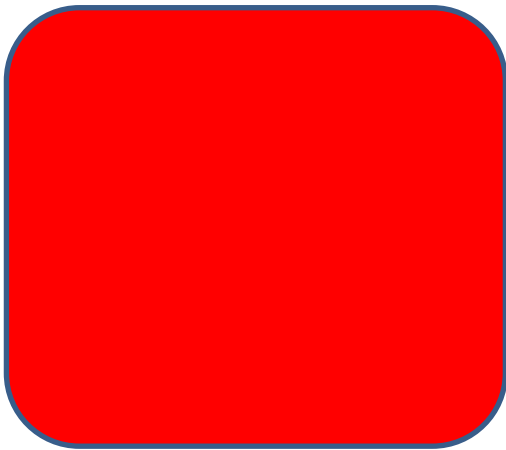

Red.





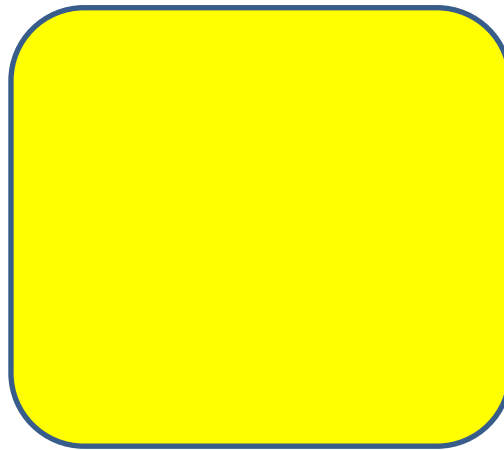


Yellow.

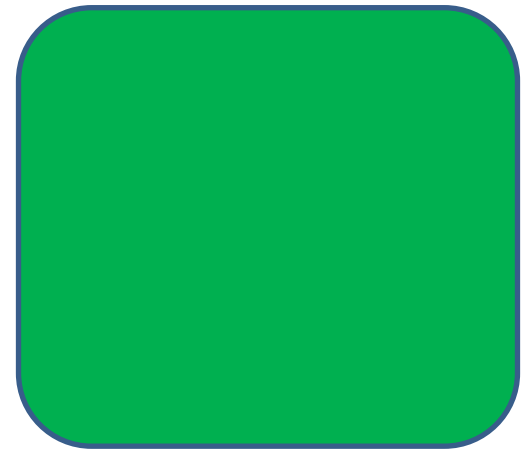


Green.




Click on the red warning lamp that the customer has described.

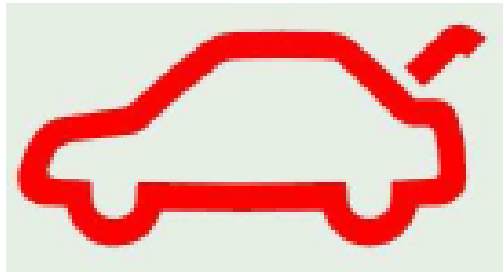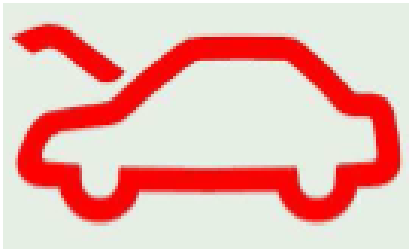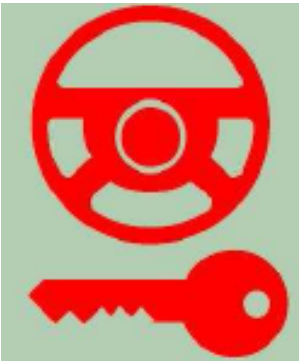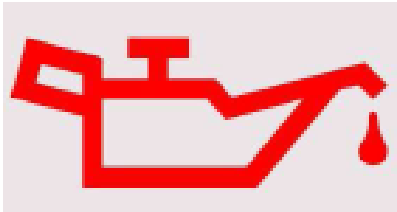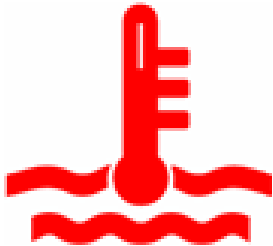

Click on the yellow warning lamp that the customer has described.

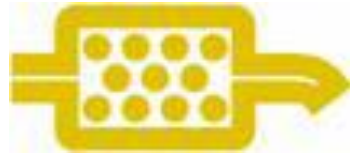


EPC

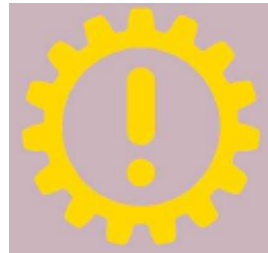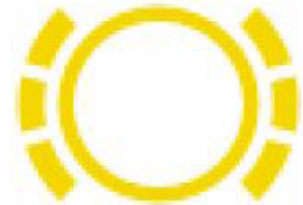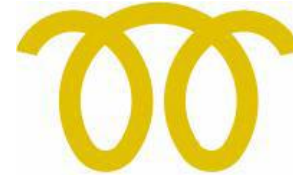


Click here for more yellow warning lamps.


Click on the yellow warning lamp that the customer has described.

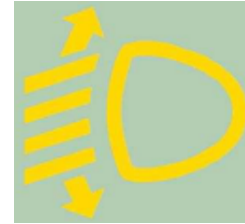



Click on the green warning lamp that the customer has described.

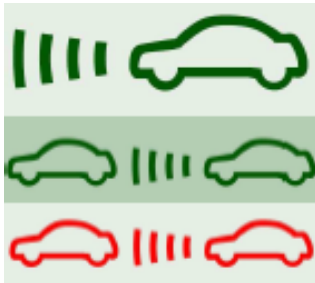



Brake system.

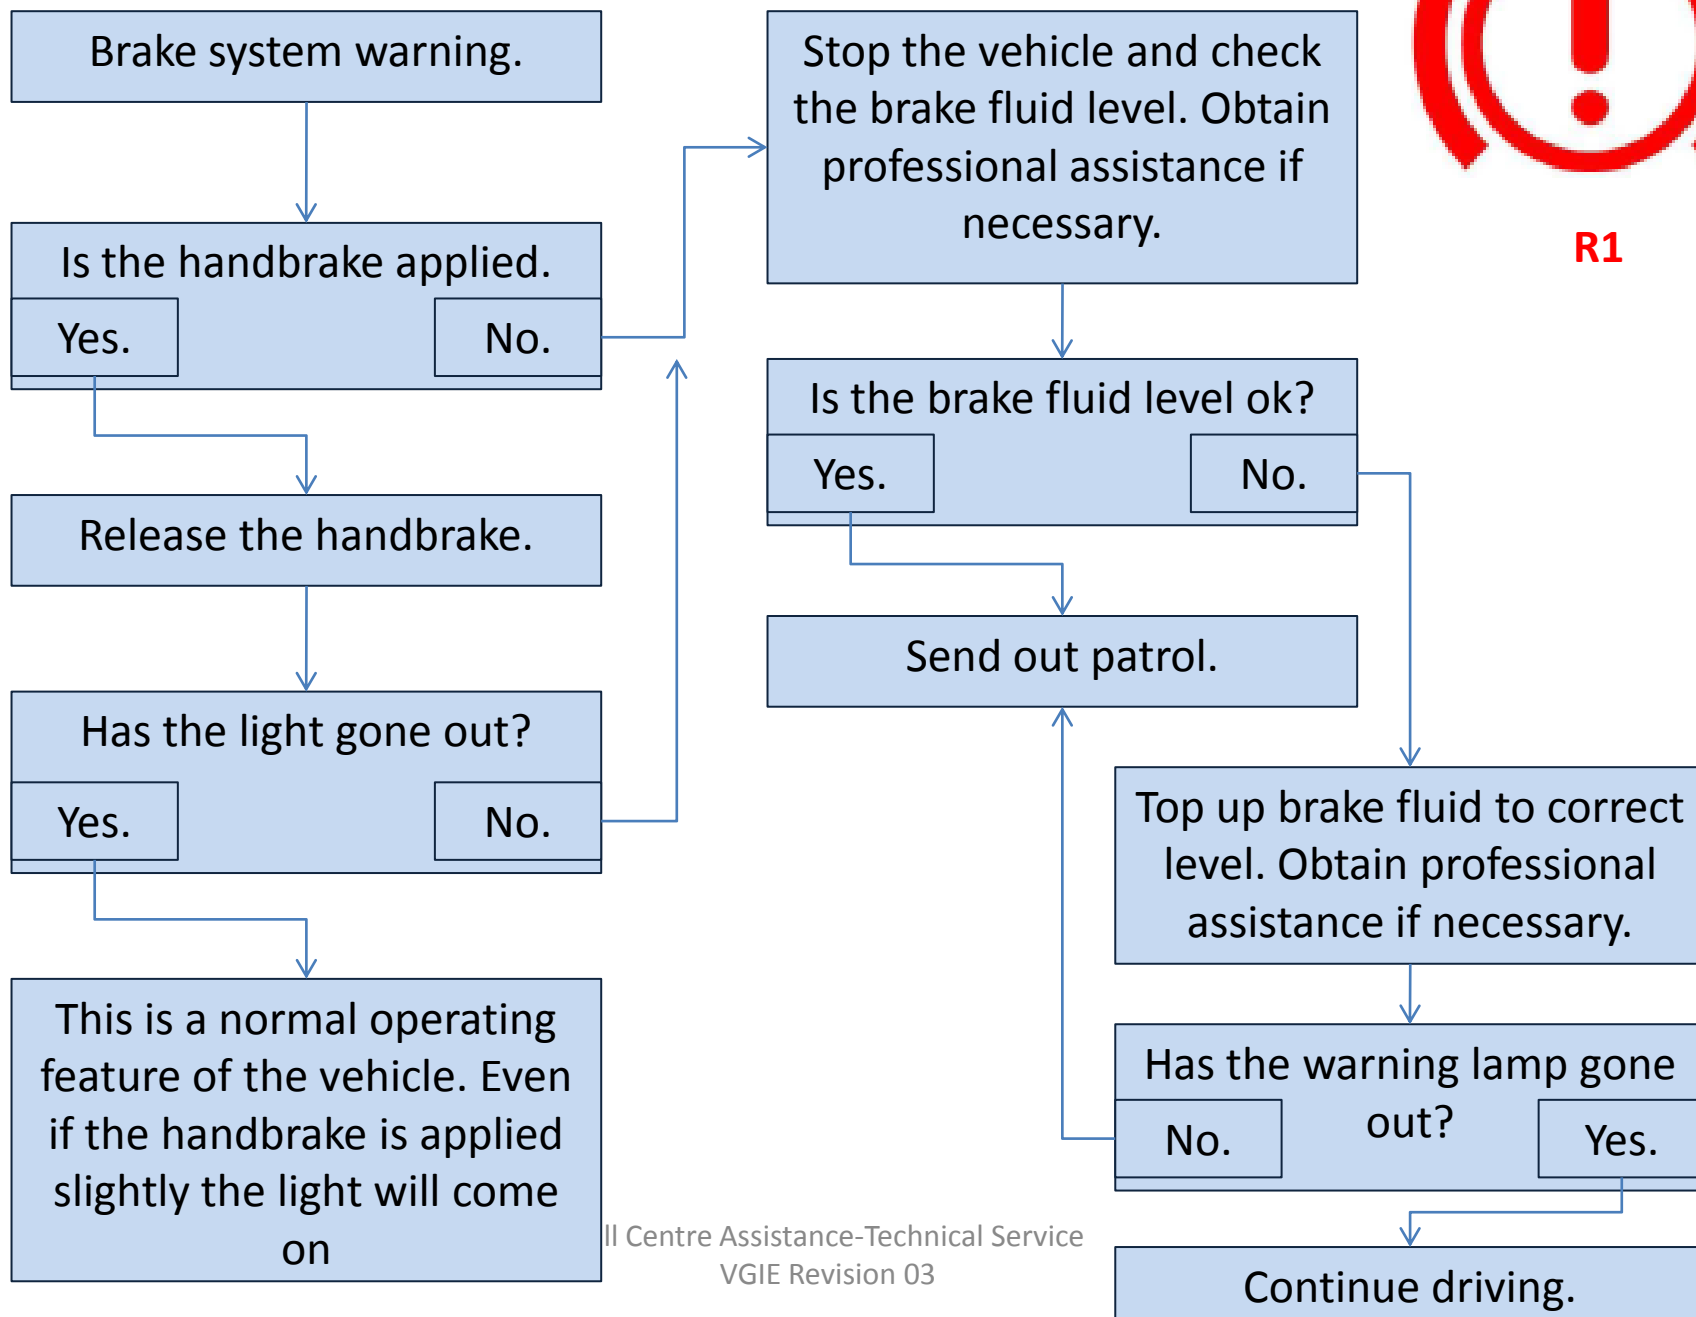**R1**

Engine cooling system.

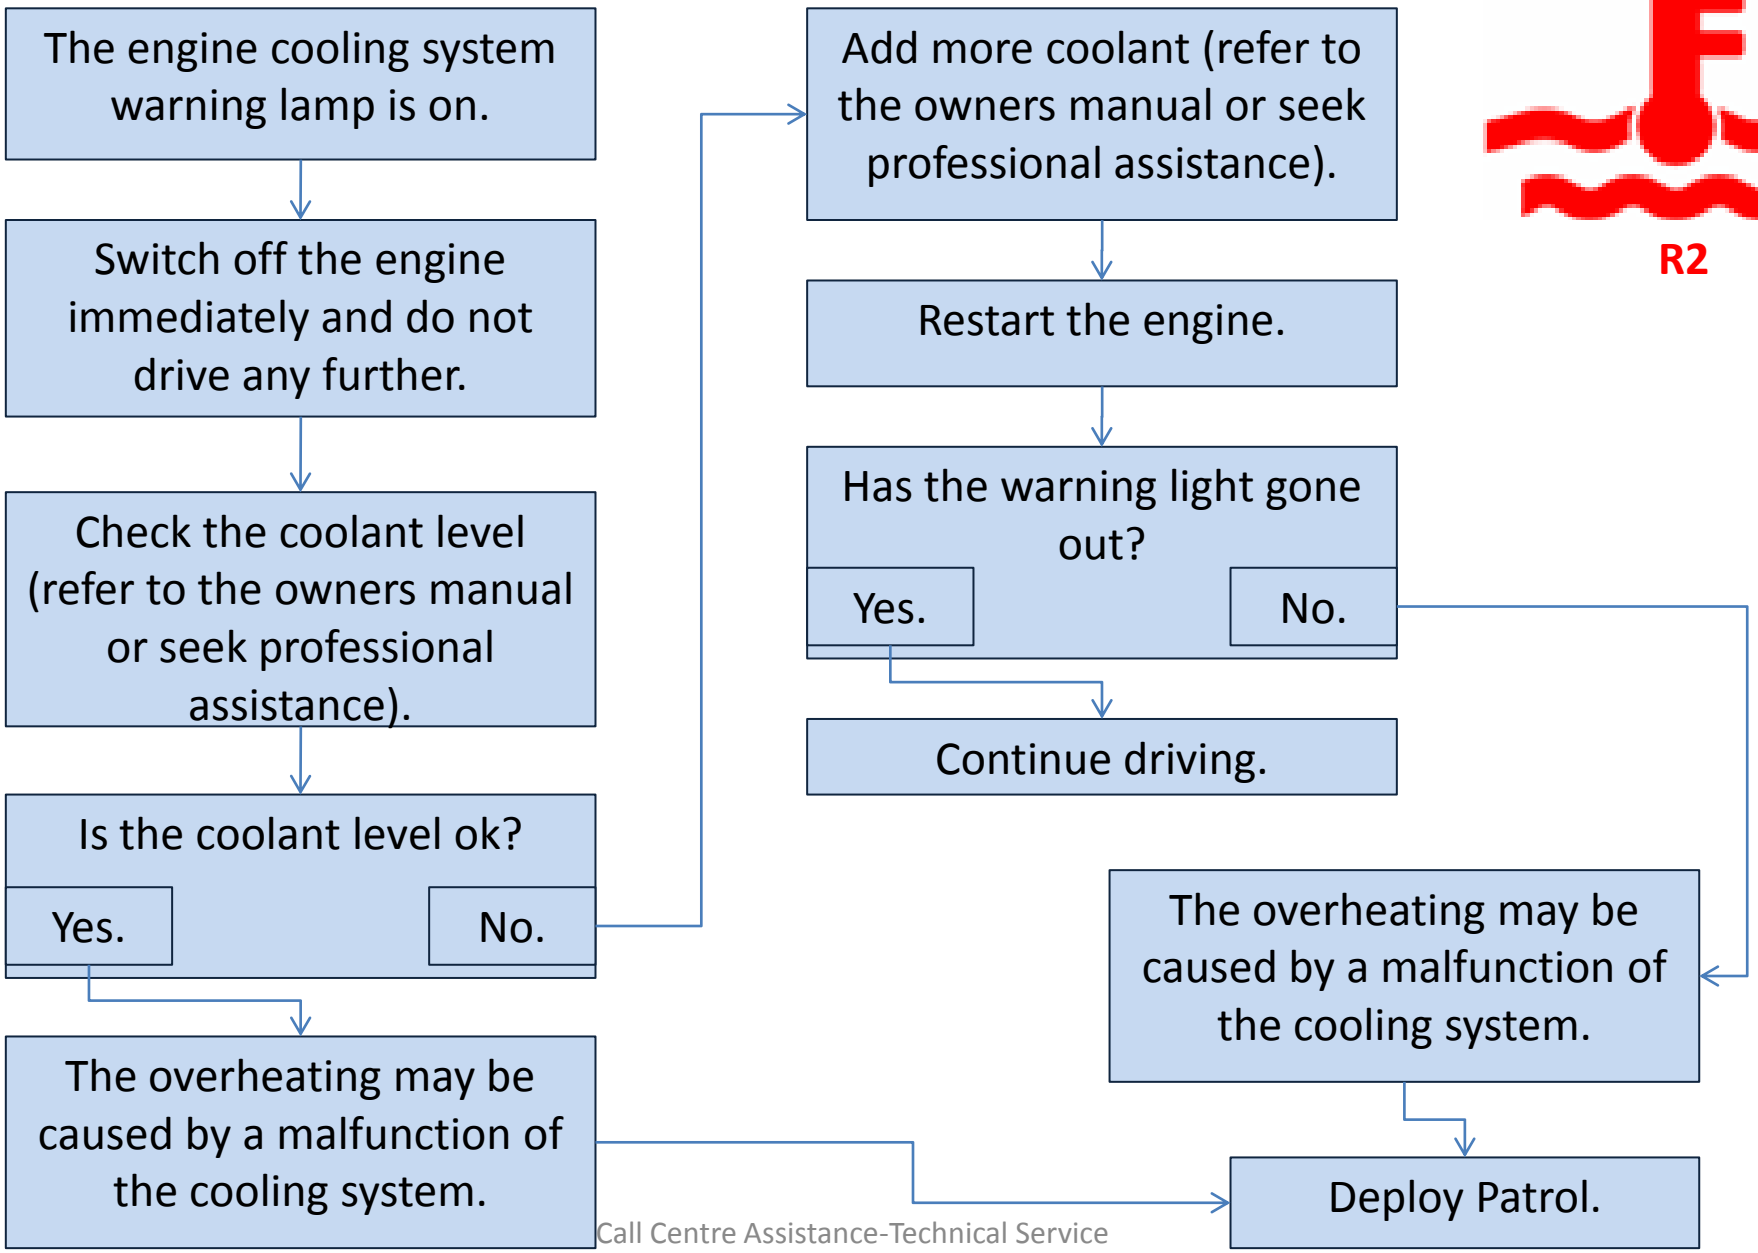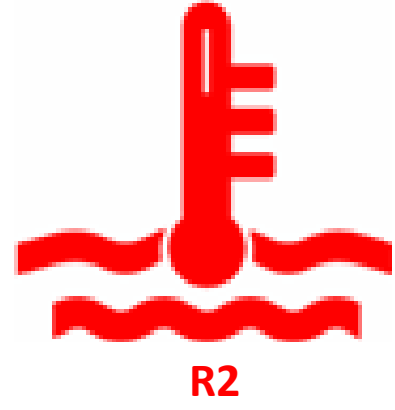


Engine oil pressure.

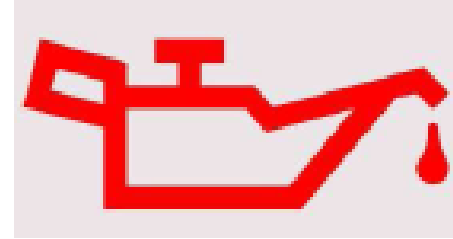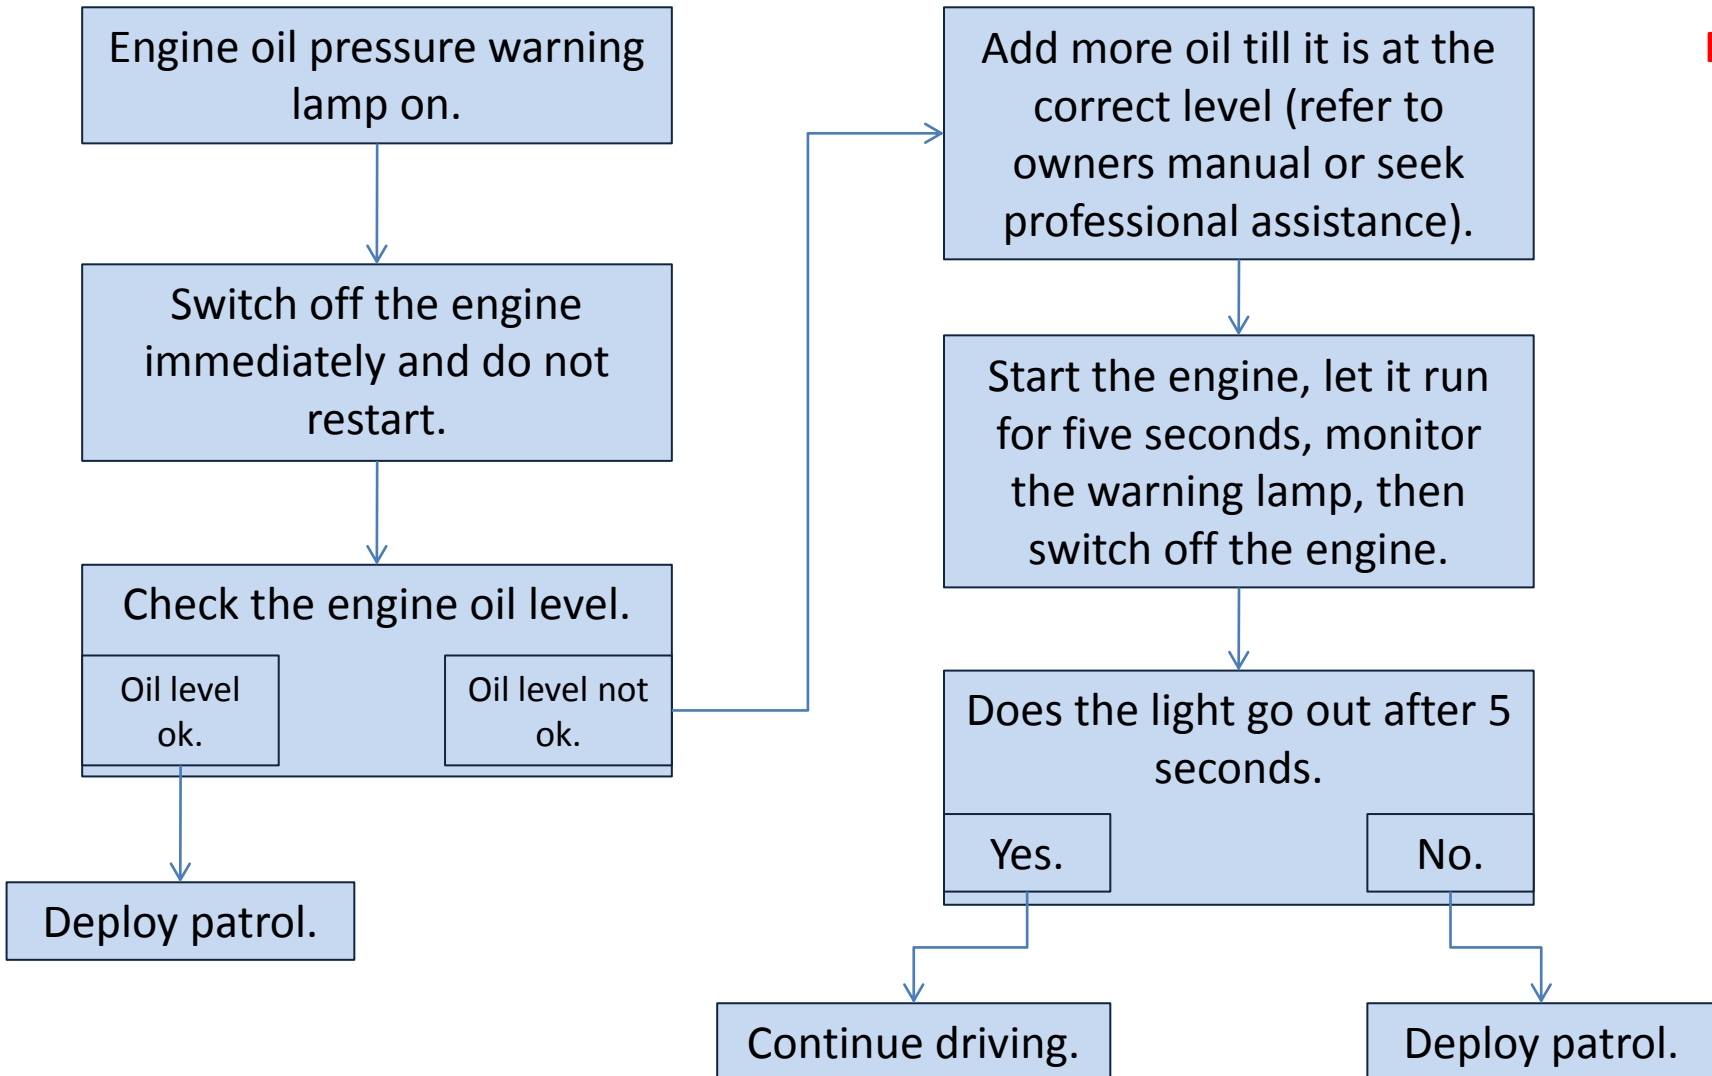**R3**

Power Steering System.



R4

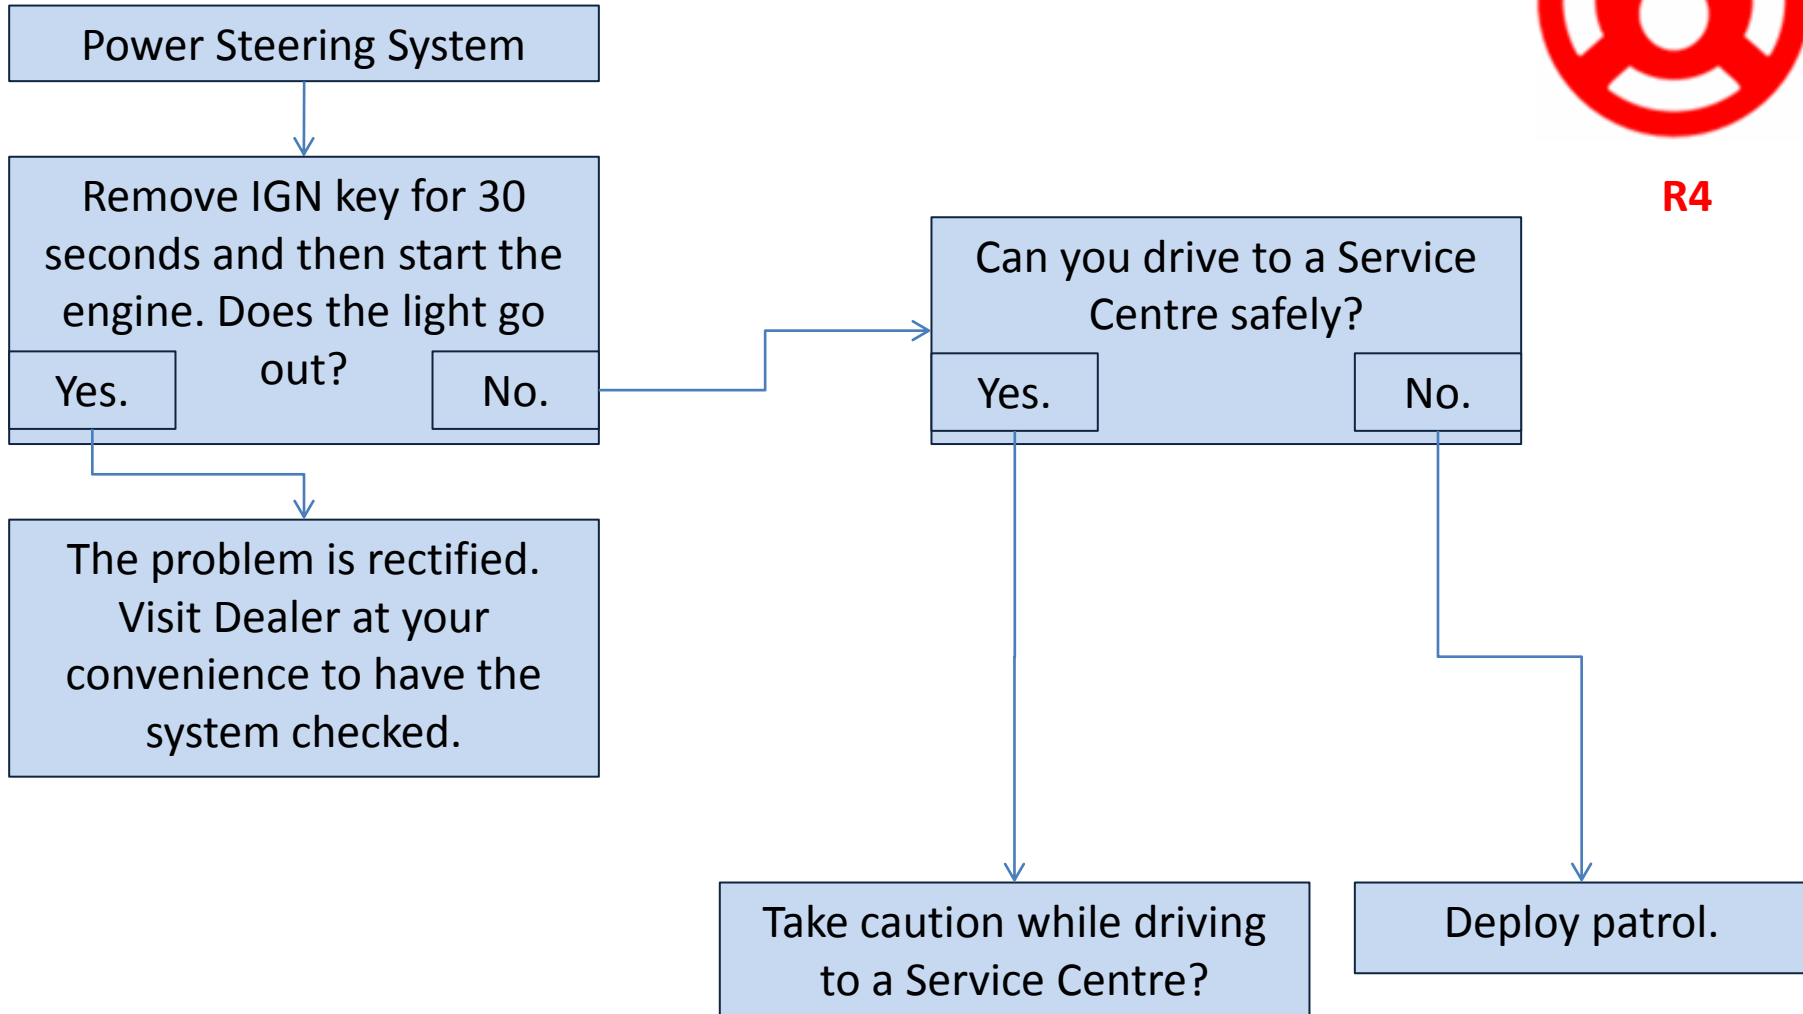

Airbag and seat belt system.

Airbag and seat belt system.

If this lamp lights up or flashes there is a fault in the airbag or seat belt system.

Drive carefully to a service centre without delay and have the fault rectified.

Have the fault in the airbag and seat belt system examined without delay; otherwise the system may fail to trigger in an accident.



R5

Vehicle charging system.



R6

Vehicle charging system warning lamp.



There is an alternator fault or a fault in the vehicle electrical system.



Is it possible to start the engine?


Yes. No.



Drive to a service centre without delay. Avoid using electrical equipment that is not absolutely necessary because this could drain the battery.

Deploy patrol.

Steering lock.

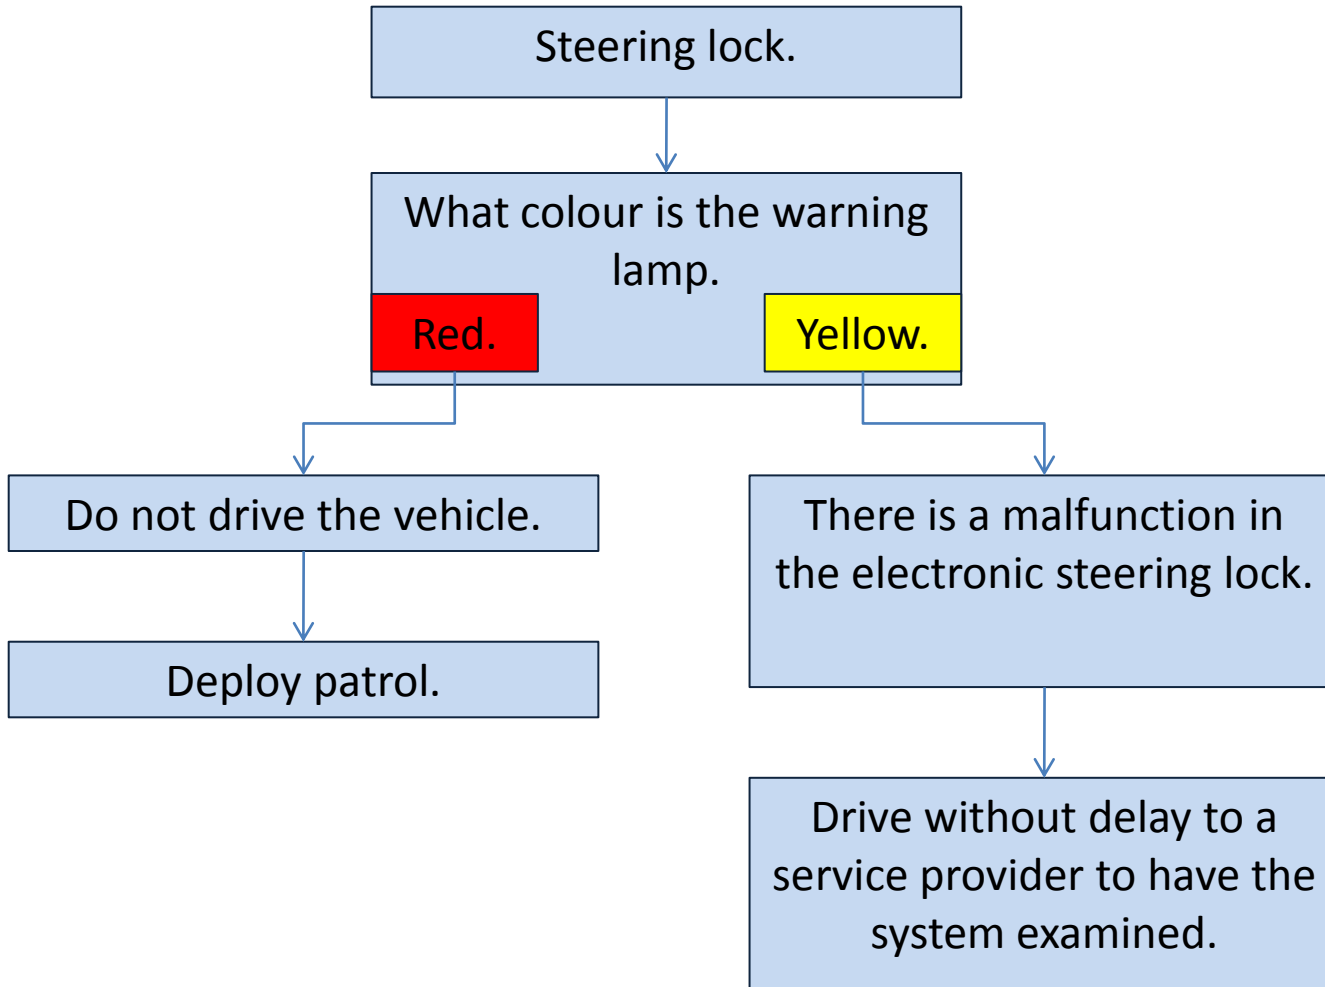

R7

Ignition switch.



R8

Ignition switch.

What colour is the warning lamp.

Red.

Yellow.

Do not switch off the ignition as you might not be able to switch it on again.

Drive without delay to a service provider to have the system examined.



There is a malfunction in the ignition switch.

Drive without delay to a service provider to have the system examined.


Seat belt buckles.



R9

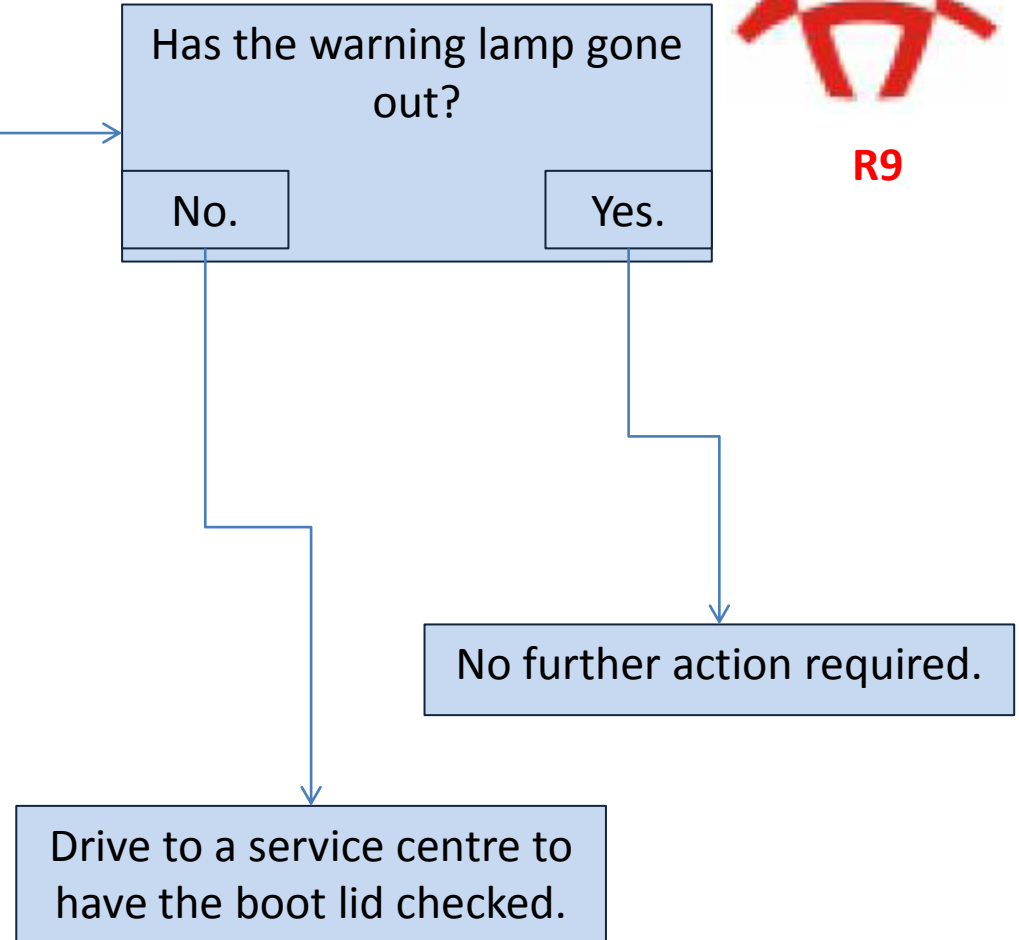
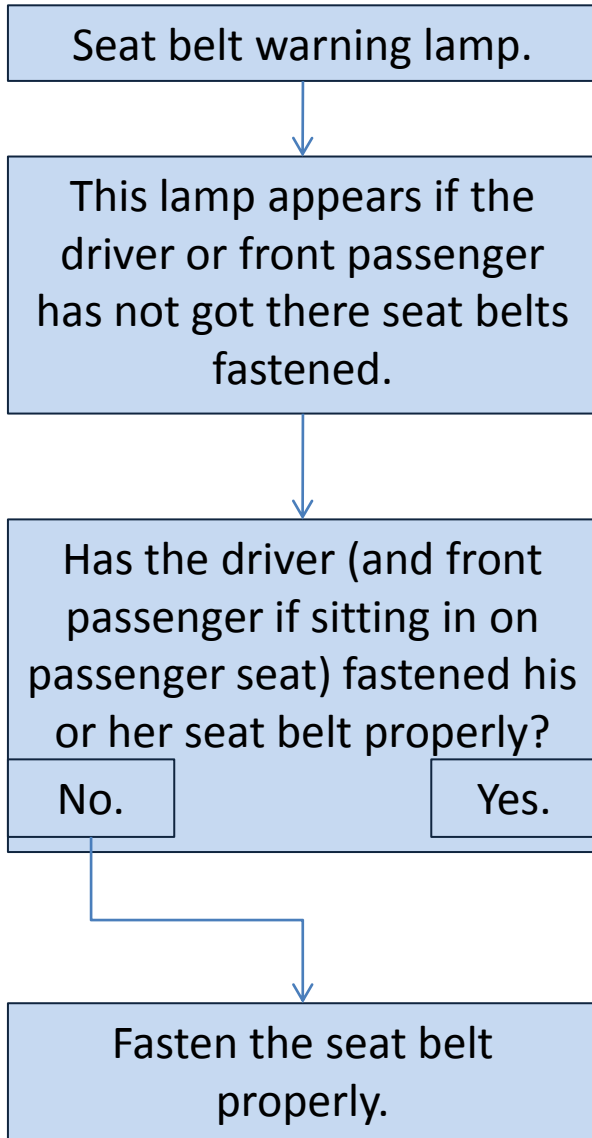


Doors.

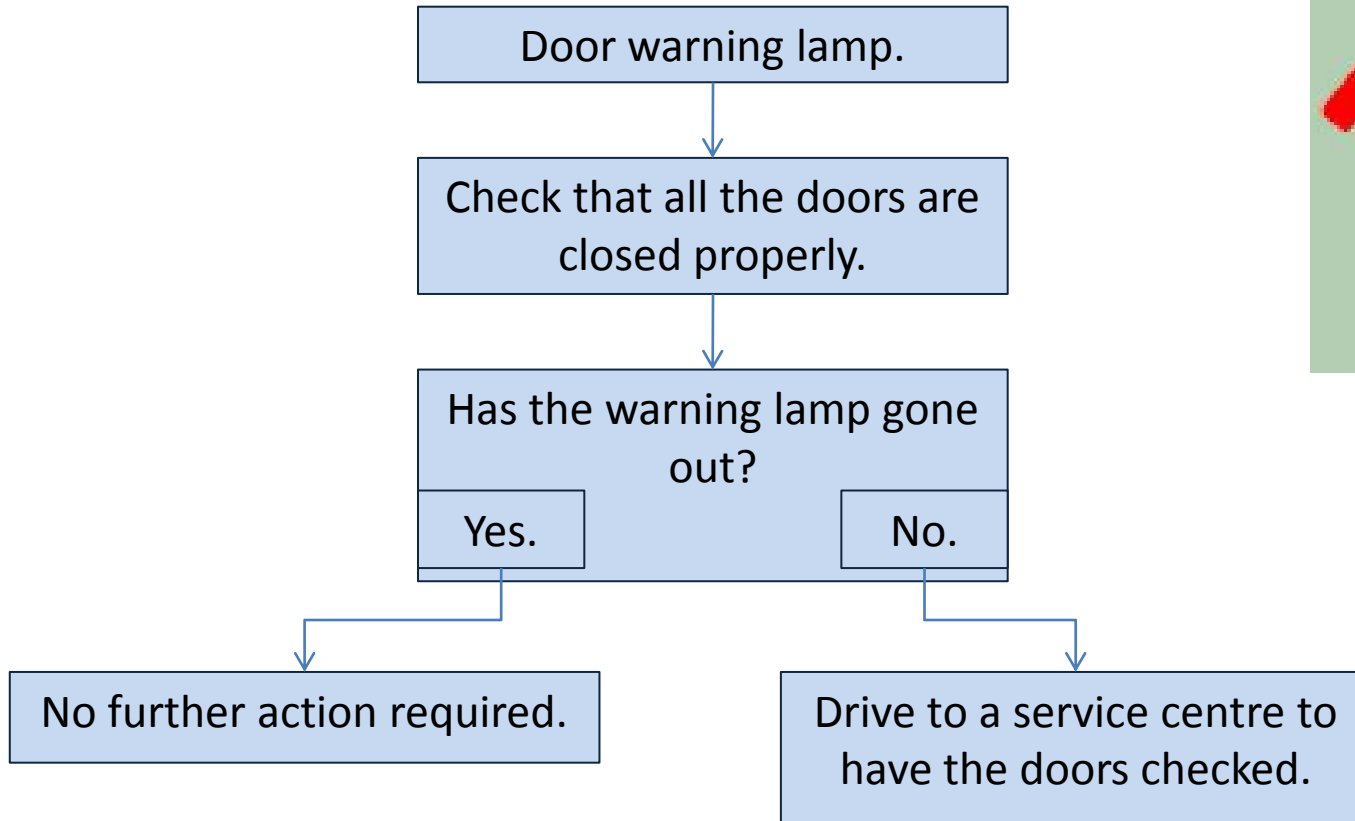


R10

Bonnet.

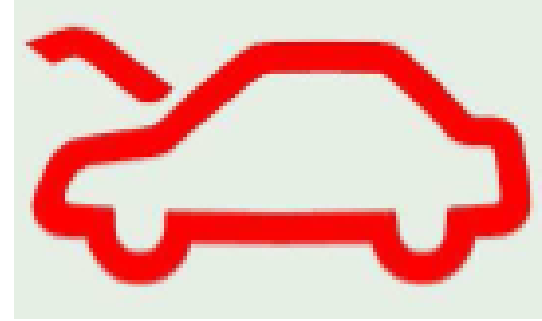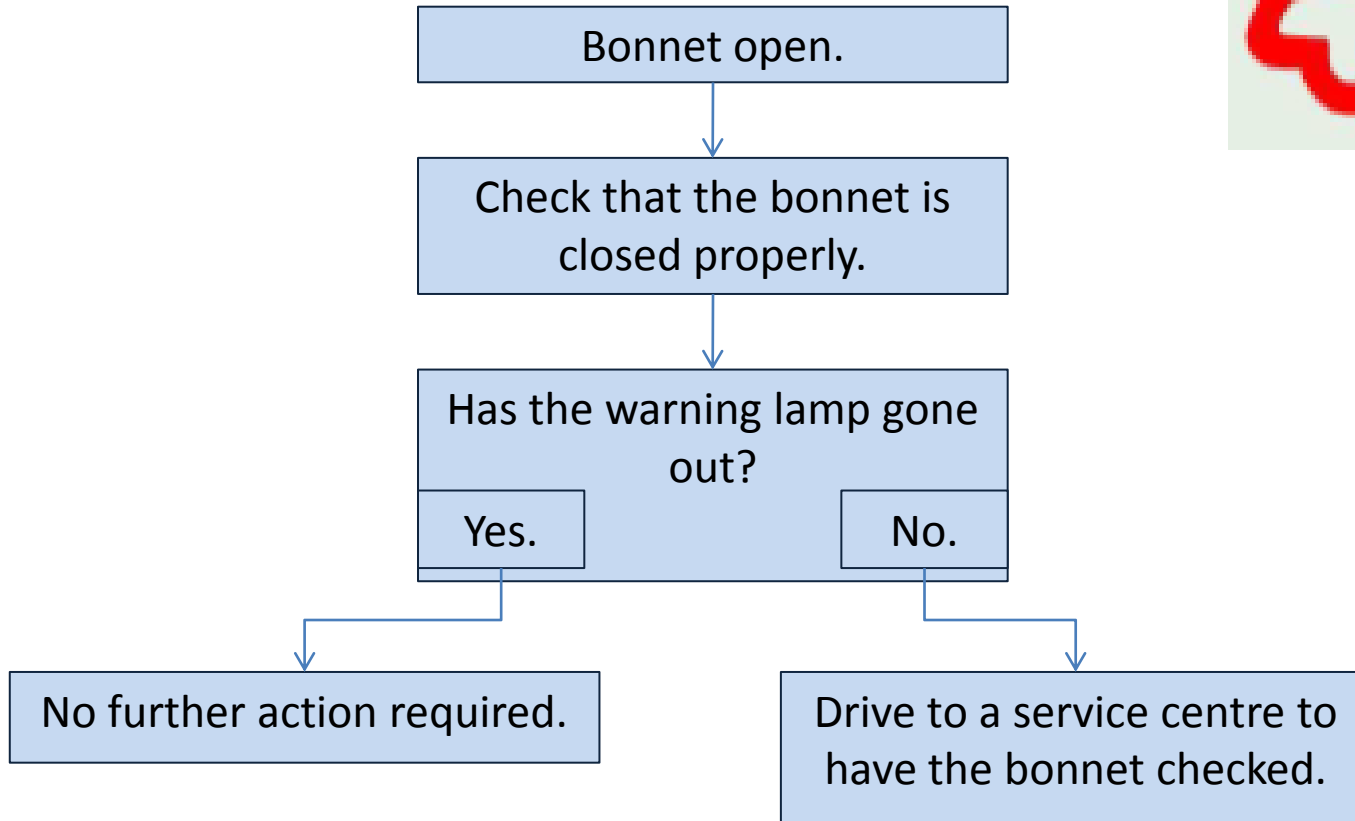


R11



Boot lid.

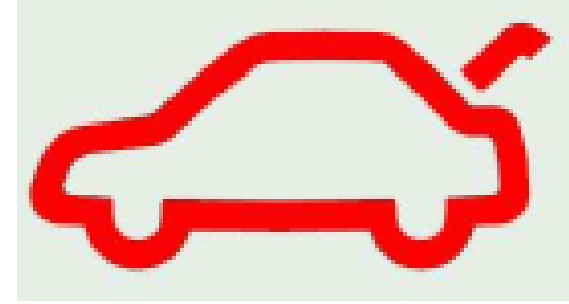


R12

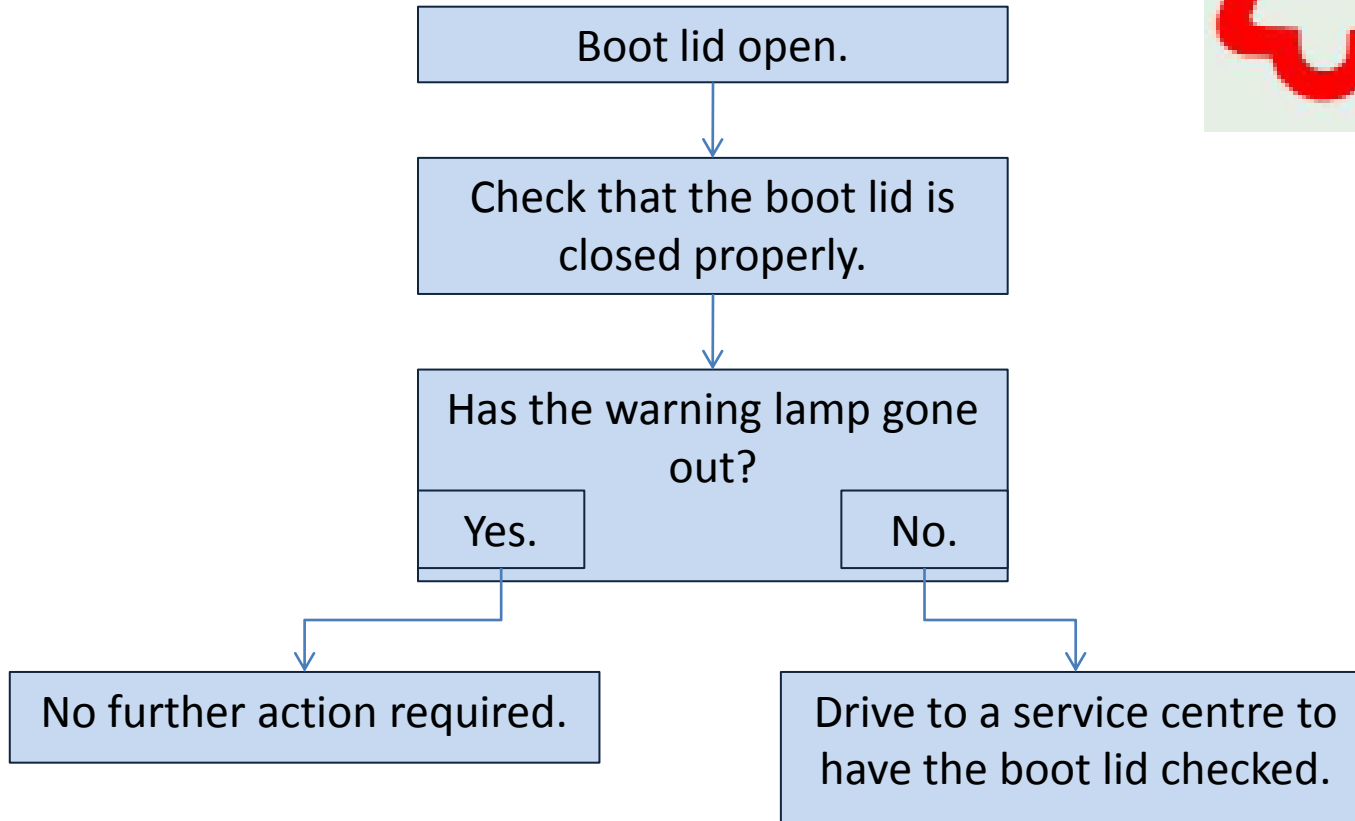

Emissions control lamp.

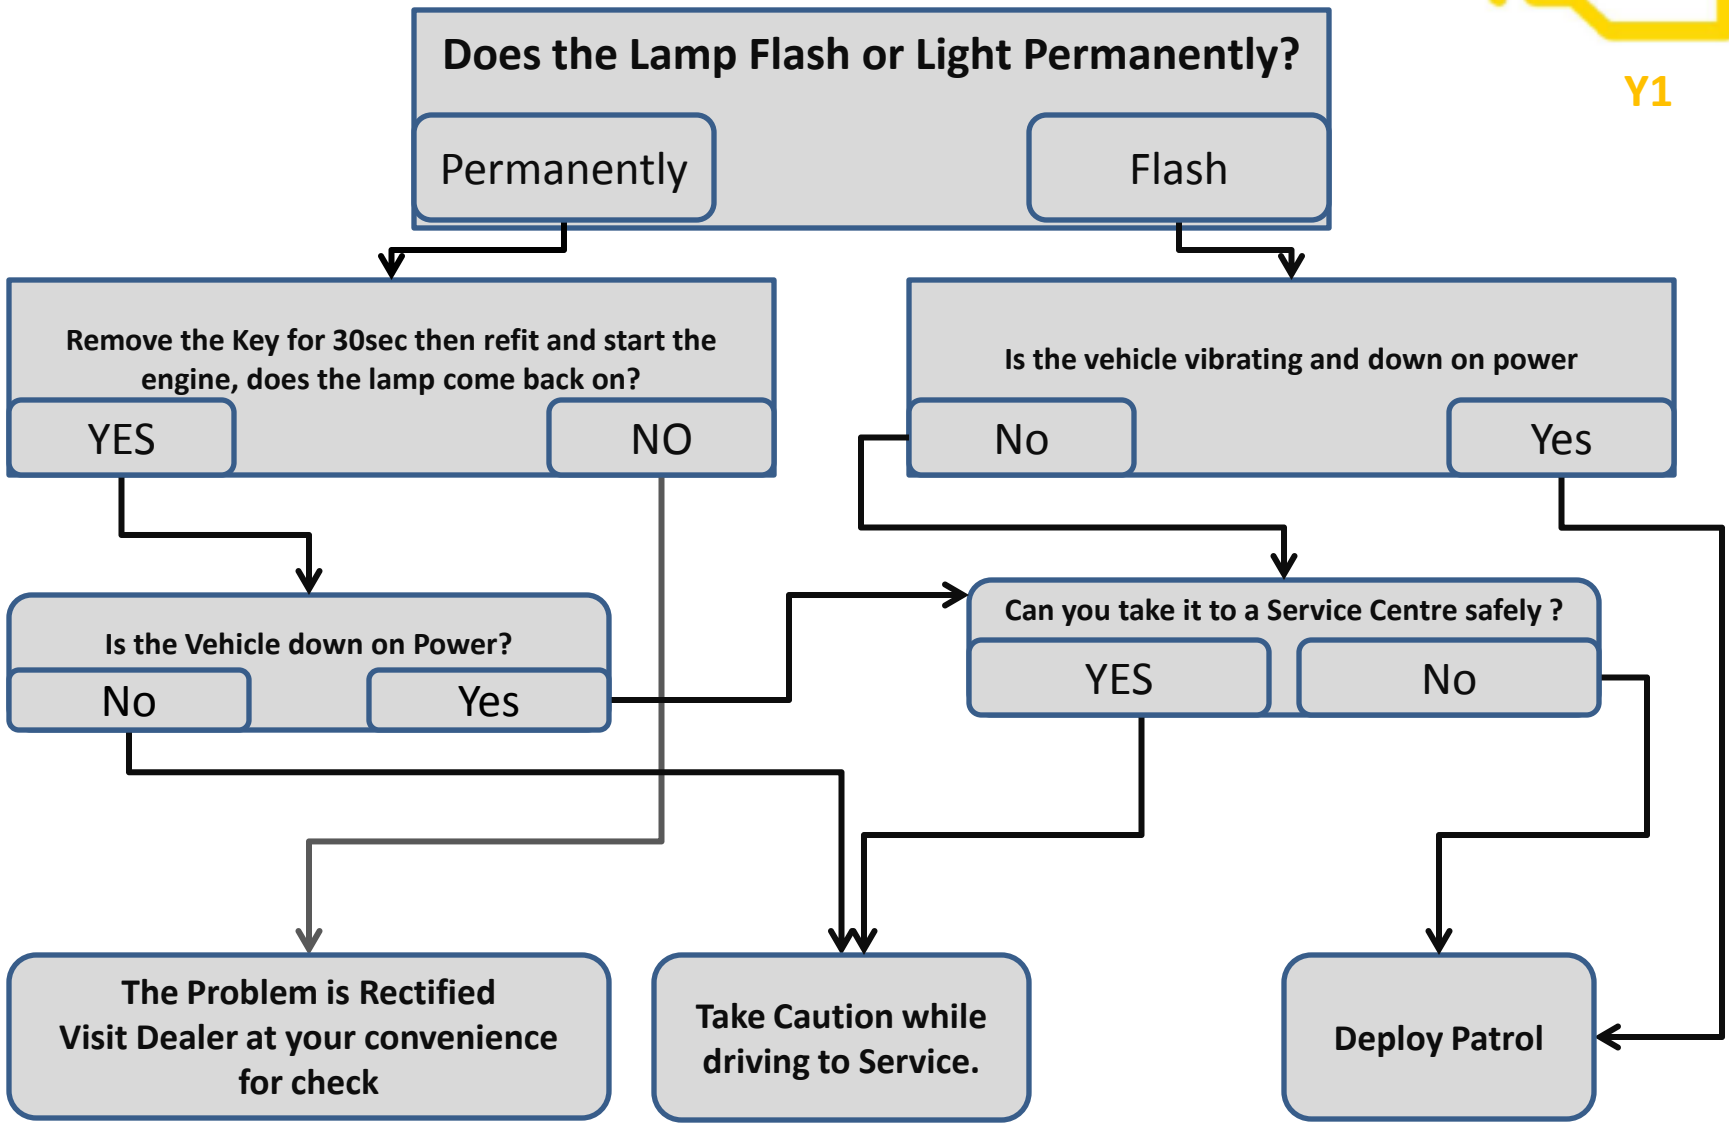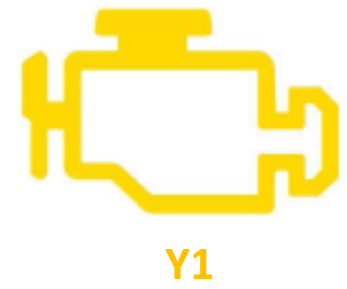

Diesel particulate filter.

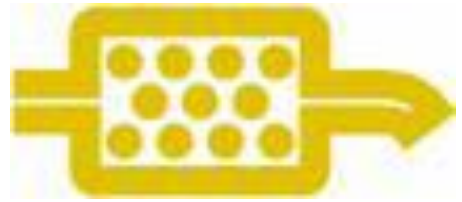

How many Warning Lamps are on?
One More than One

Fuel Low Warning Lamp On?
No Yes

Refuel Vehicle

Drive at least 60Km/hr @ engine speed between 1800-2500rpm, at least 15mins until light goes out. (Automatic; Select Sport)
Call back after 30mins.
Did the lamp go out?
Yes No

Can you take the Vehicle to your closest Service Centre?
Yes No

Filter Successfully Regenerated

Drive Safely to Service Centre

Deploy Patrol

Engine management lamp.

EPC


Y3

Engine management warning lamp on (petrol engines only).

Drive slowly and carefully to a service centre without delay and have the engine checked.

Engine management lamp.

Engine management warning light on (diesel engines only).

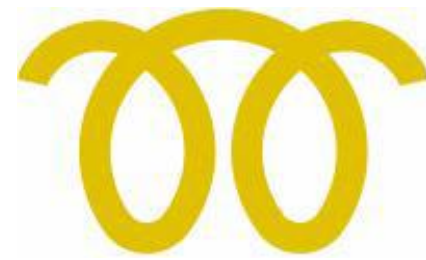

Y4

Did this indicator lamp appear when the ignition was switched on, or did it appear while the engine was running.

With ignition on only.

While the engine was running.

It is normal for this lamp to appear for a few seconds when the ignition is switched on to signify that the glow plugs are preheating.

There is a fault in the engine management system if the lamp appears constantly or flashes while the engine is running.

Drive slowly and carefully to a service centre without delay and have the engine checked.

Engine oil level.

Engine oil level low.


Is the lamp lit continuously
or is it flashing?

Light
Continuously.

Flashing.

Top up the engine oil as soon as possible (refer to the owners manual for instructions or seek professional assistance).

The sensor for checking the oil level may be faulty. Check the oil level and top up if necessary (refer to the owners manual for instructions or seek professional assistance). Drive to a service centre without delay to have the oil level sensor checked.

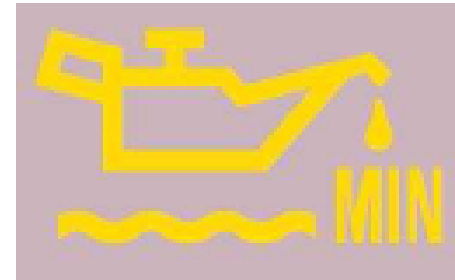

Y5

Anti-lock brake system (ABS).



Y6


Anti-lock braking system
fault.

The vehicle can still be
braked in the normal way,
but the ABS and ESP may
not function.


Drive carefully to a service
centre to have the ABS
system examined.

Electronic stability programme (ESP).

Y7

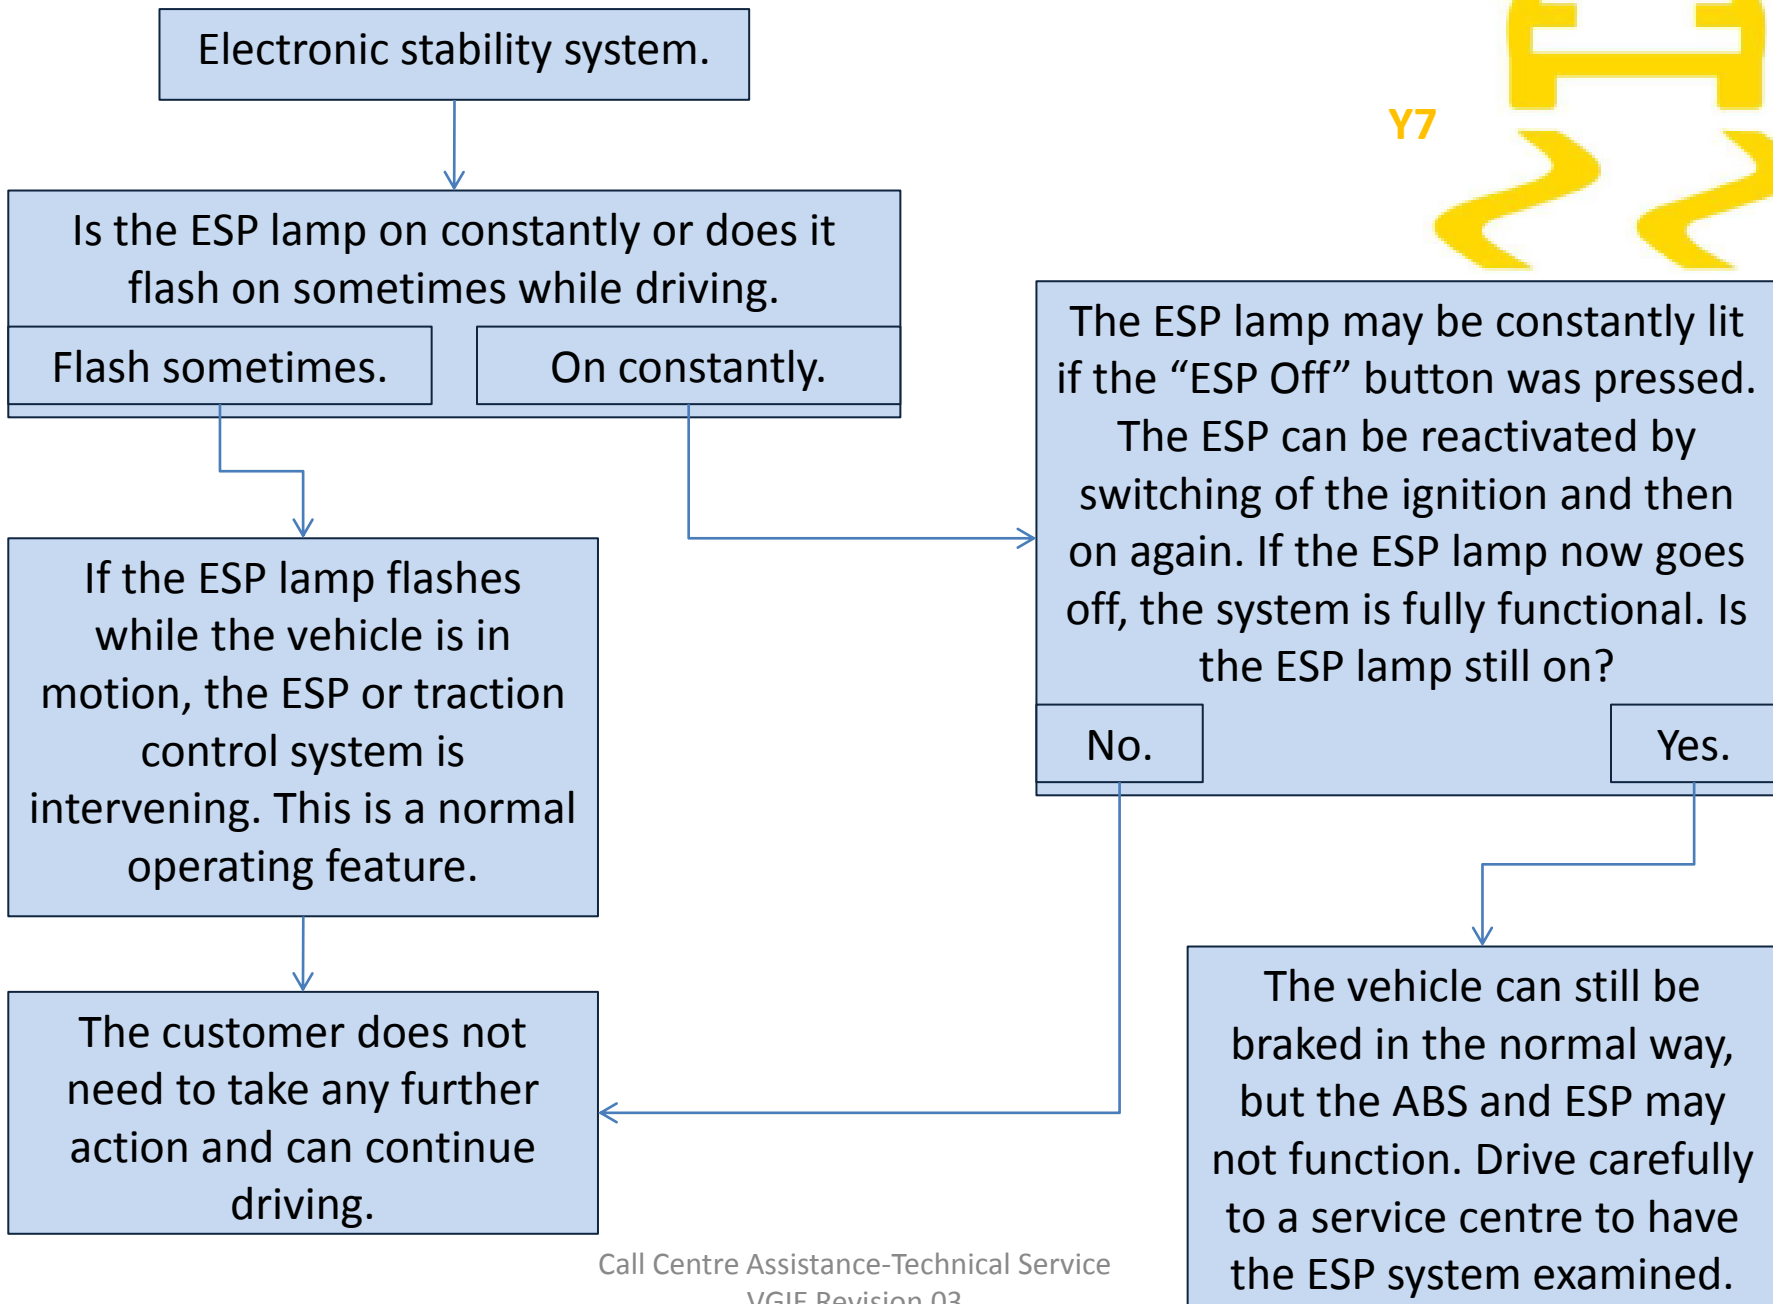


Tyre pressure monitoring.

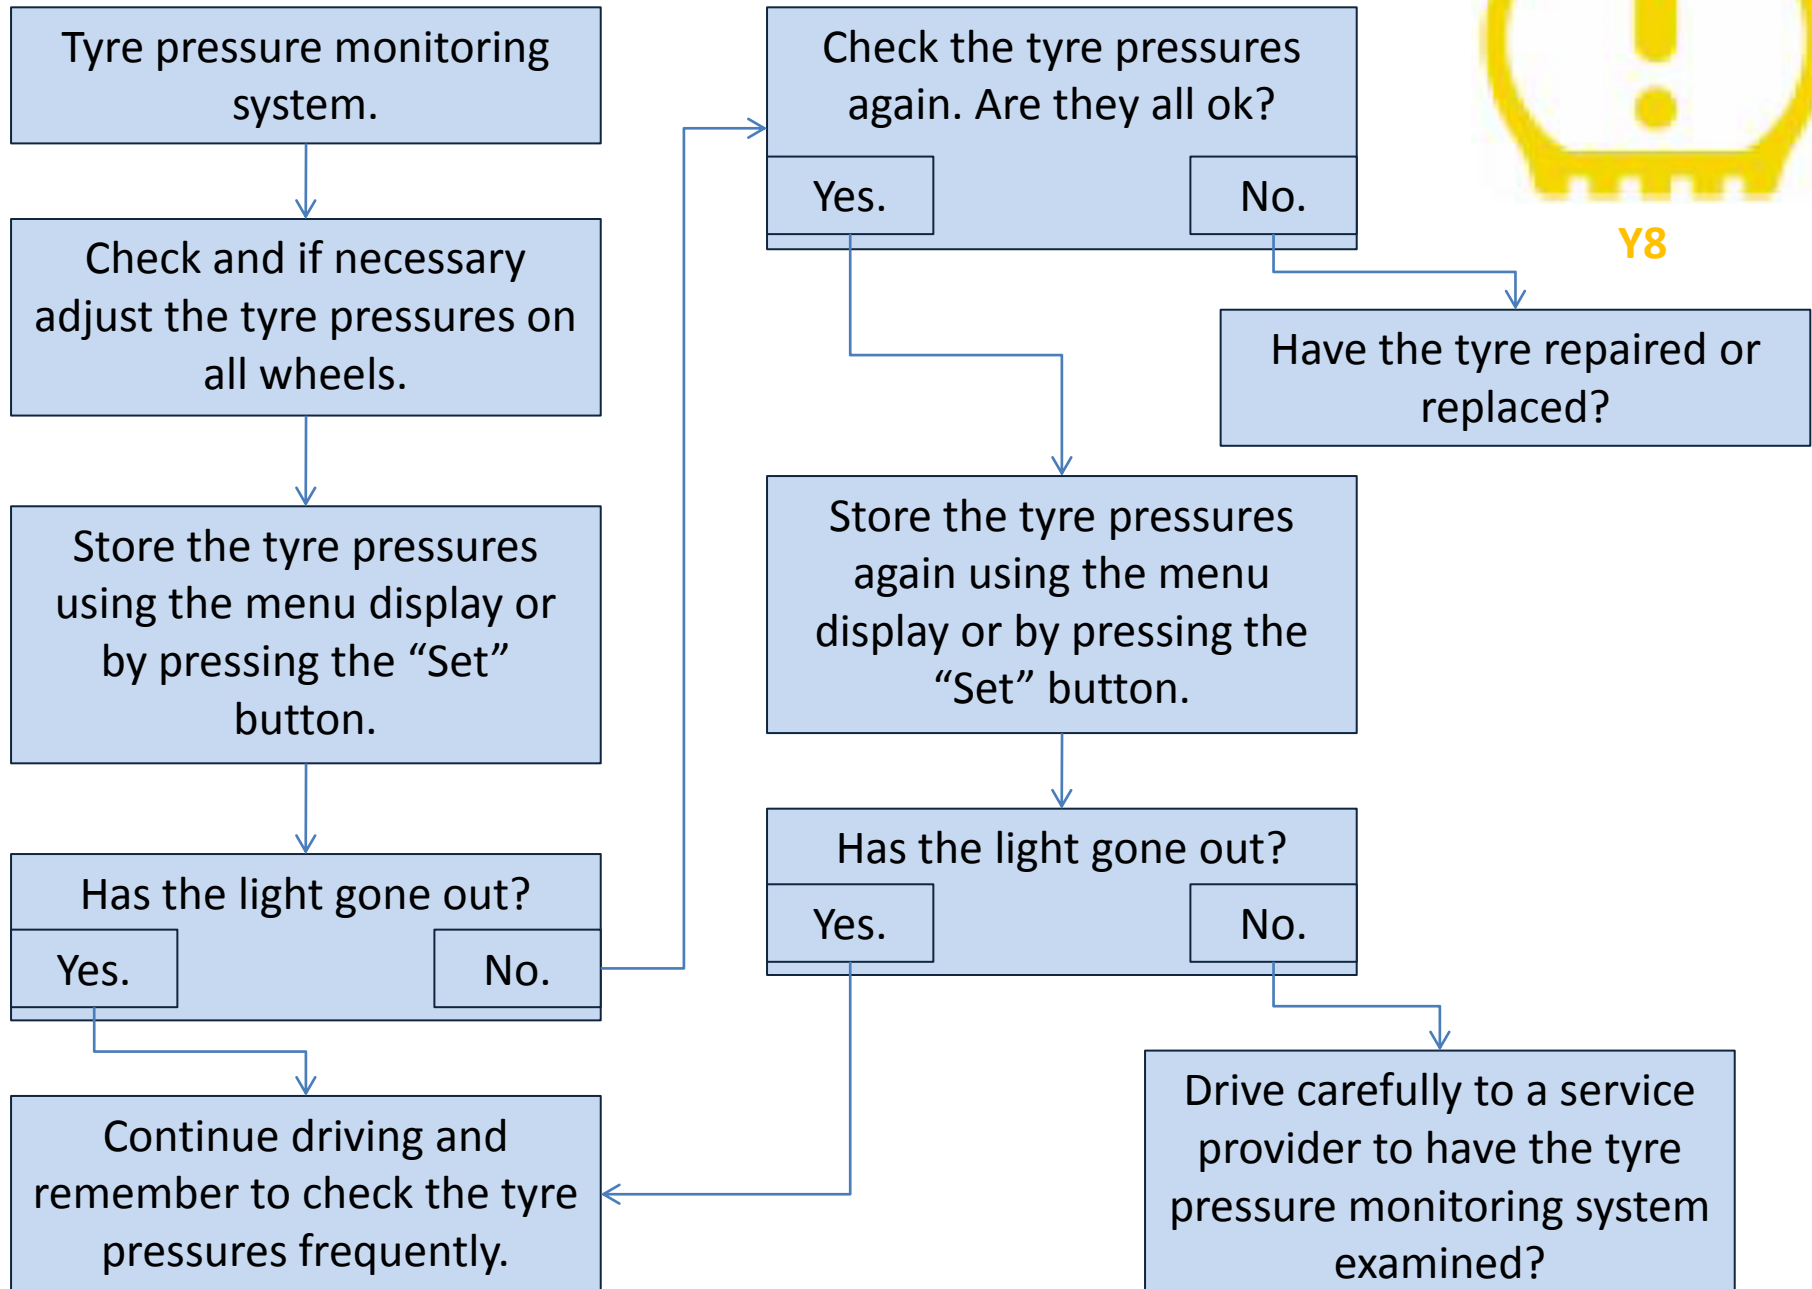


Power Steering System.



Y9

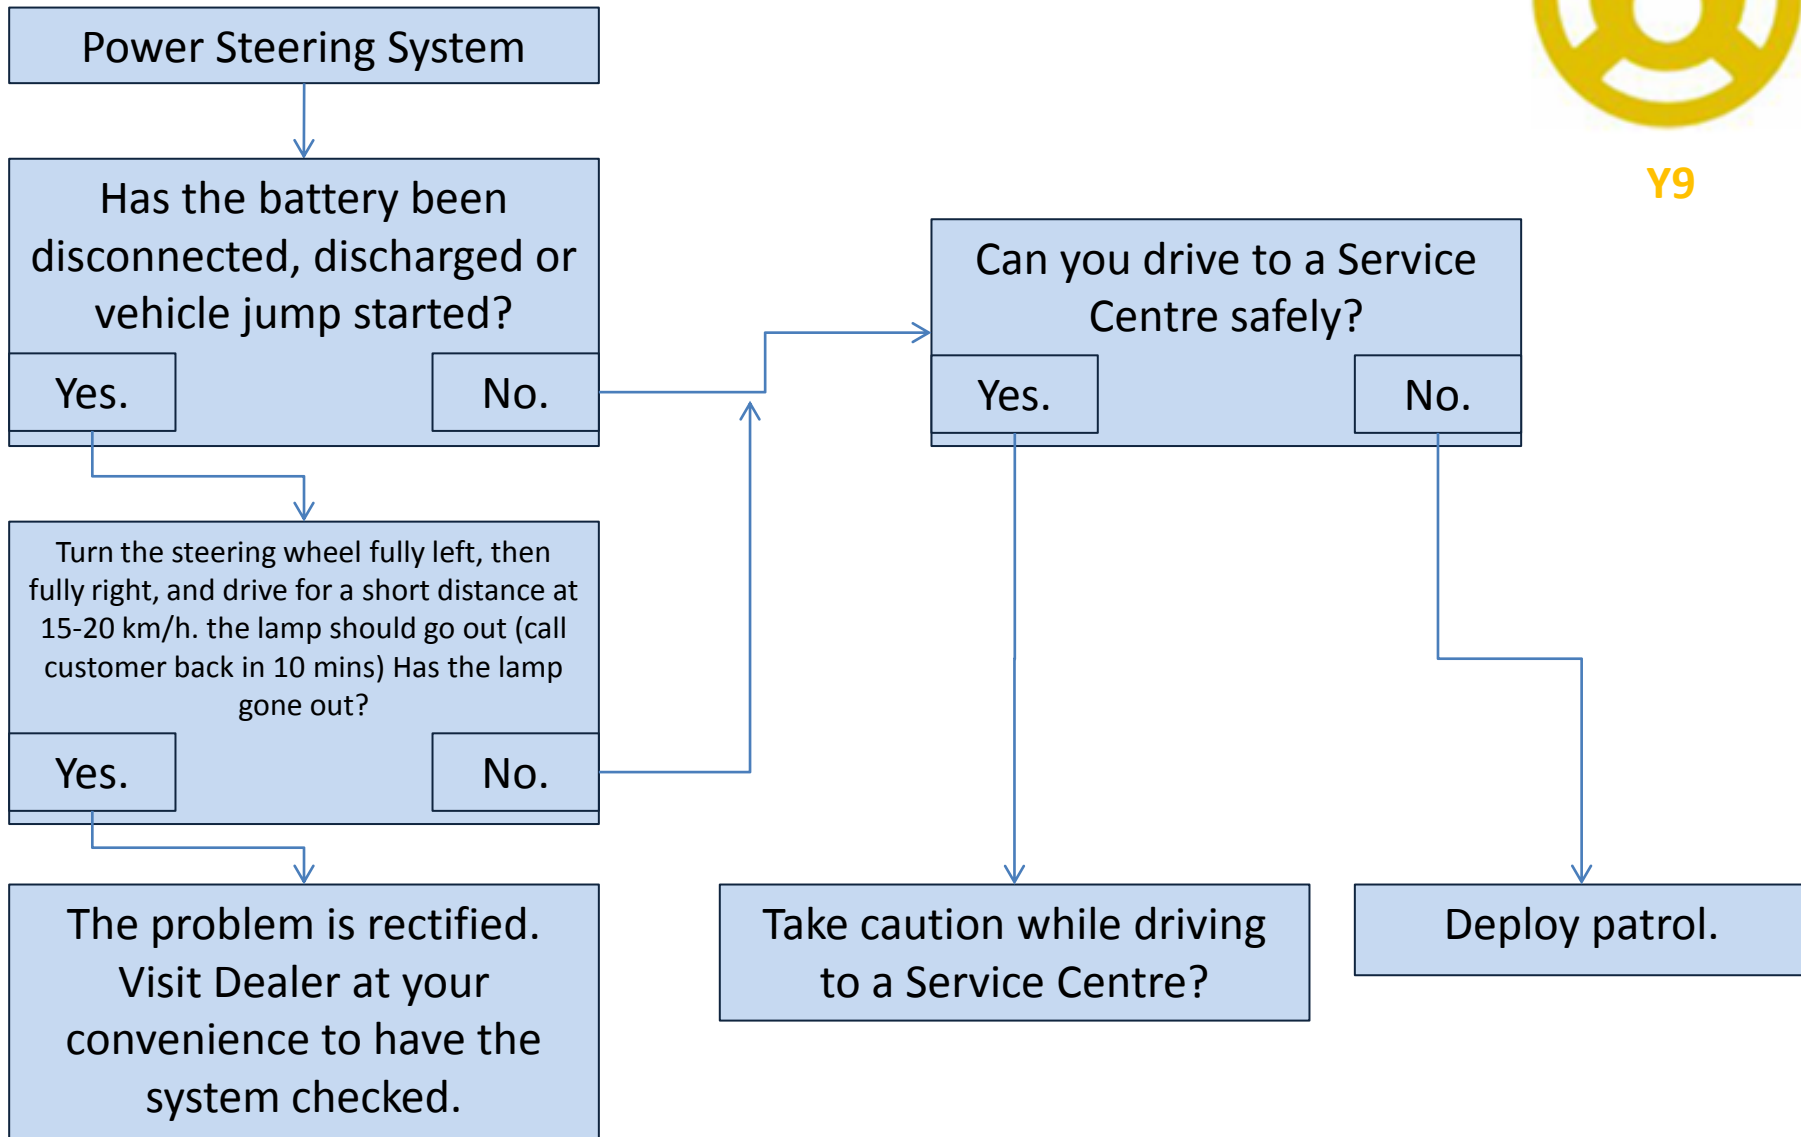

Brake pad monitoring.

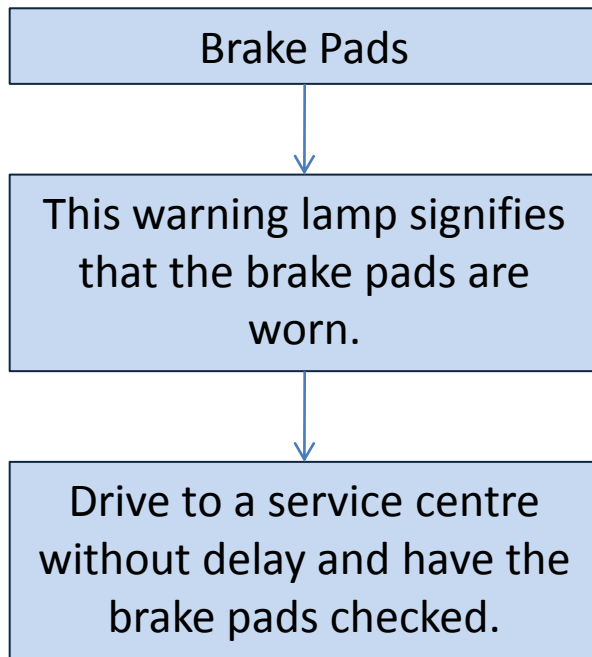

Y10

Airbag and seat belt system.

Airbag and seat belt system.

If this lamp lights up or flashes there is a fault in the airbag or seat belt system.

Drive carefully to a service centre without delay and have the fault rectified.

Have the fault in the airbag and seat belt system examined without delay; otherwise the system may fail to trigger in an accident.




Y11

Automatic Gearbox.

Gearbox malfunction.

If this lamp appears it may be accompanied with a message in the driver information system, such as.

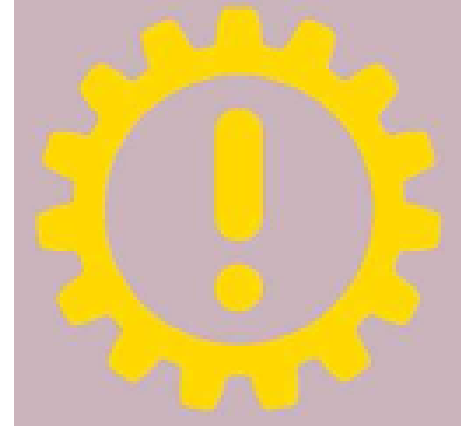

Y12

“Please press brake pedal and select gear again”.

“Please adapt driving style”.

“You can continue driving”.

Please press brake pedal and try selecting a gear again

“Reverse gear not available”.

“Please stop the vehicle and select P”.

Is the lamp still on?

No.

Yes.

Drive without delay to a service provider to have the system examined.

Continue driving.


Deploy patrol.

Air Suspension.

Air suspension fault.



A system fault has occurred and the vehicles handling, stability, and ground clearance may be affected.

Drive carefully and slowly to a service provider to have the system examined.

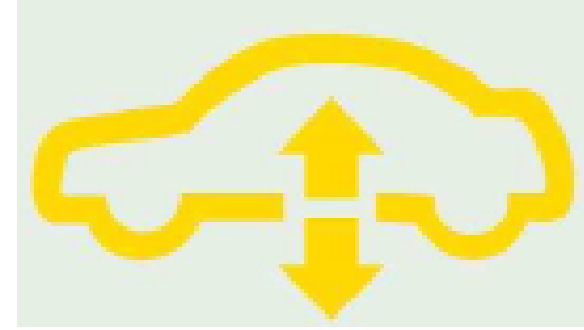



Y13

Adaptive suspension dampers.

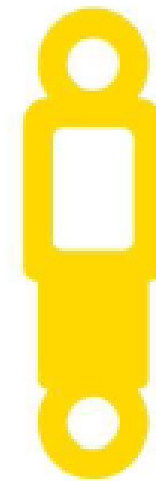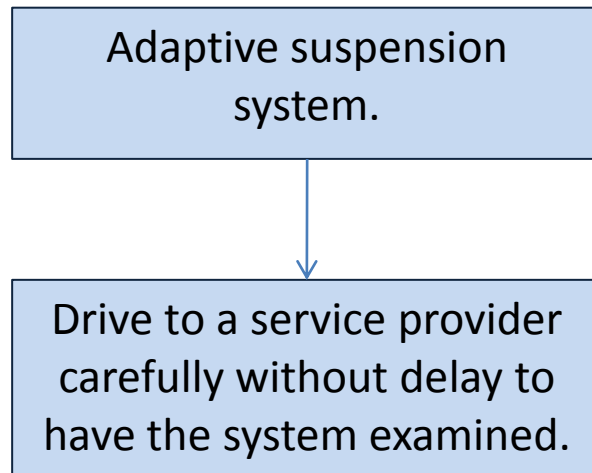


Y14

Rear spoiler.

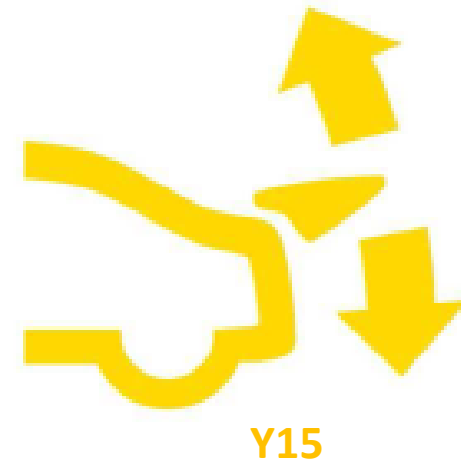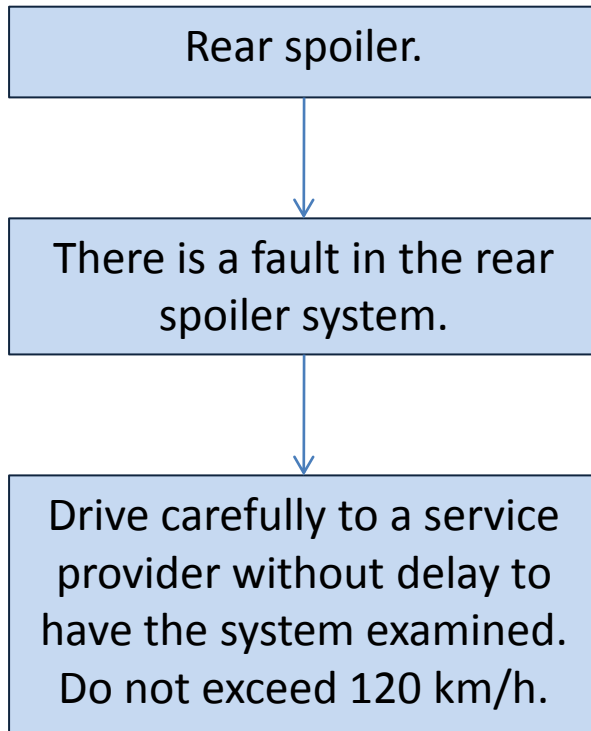


Bulb monitoring.

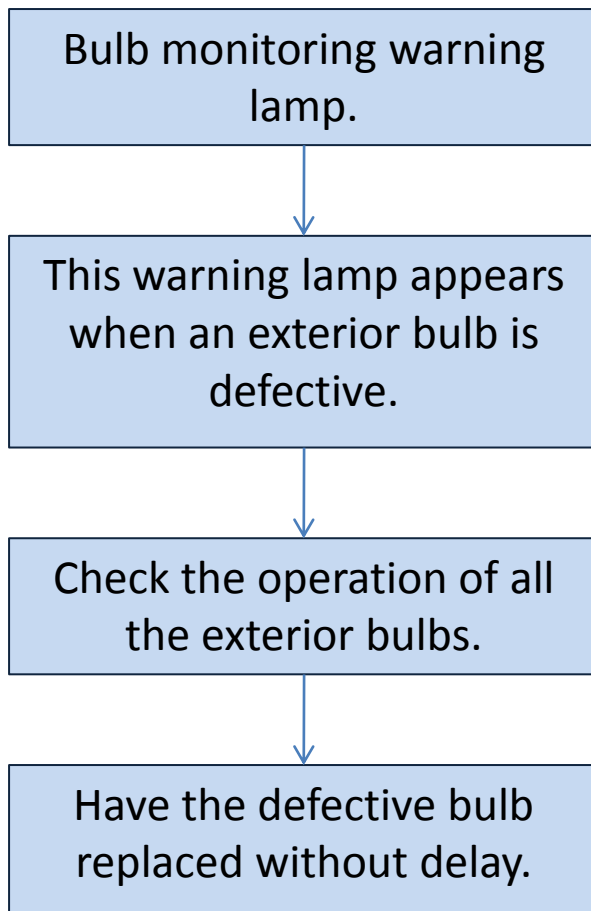


Y16

Brake lights.

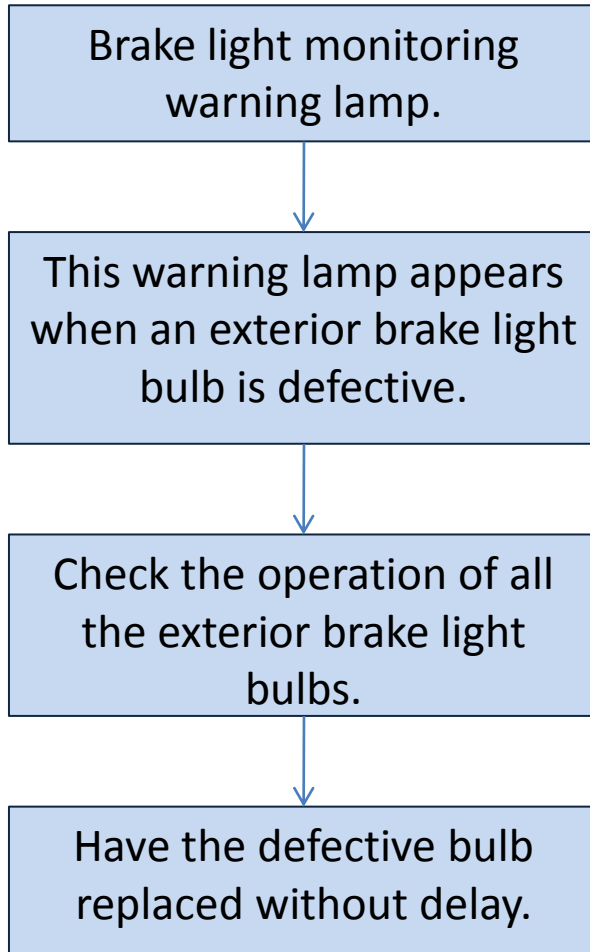



Y17

Rain and light sensor.

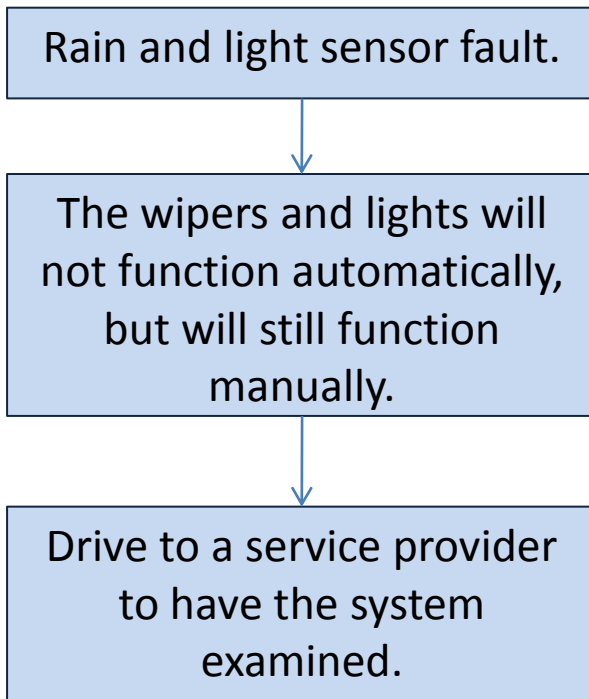


Y18

Headlight range control.

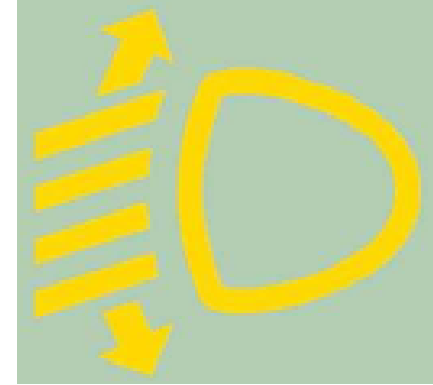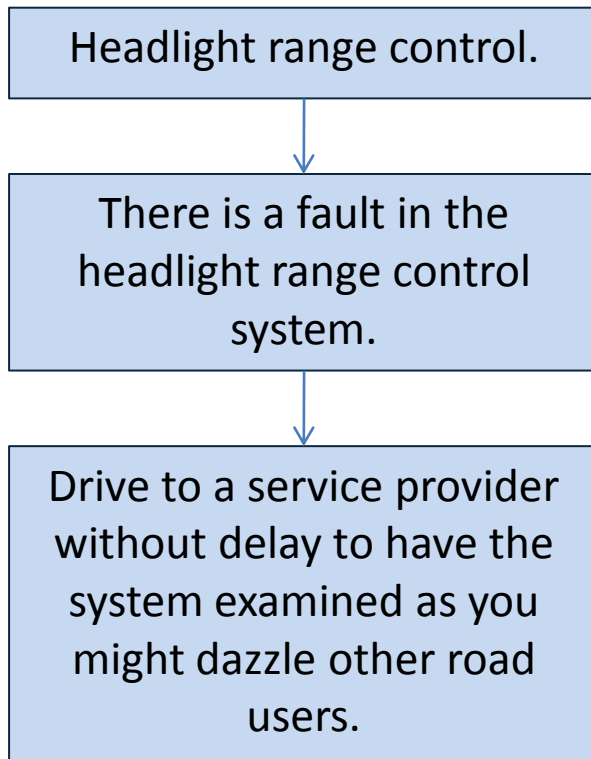



Y19

Adaptive light system.

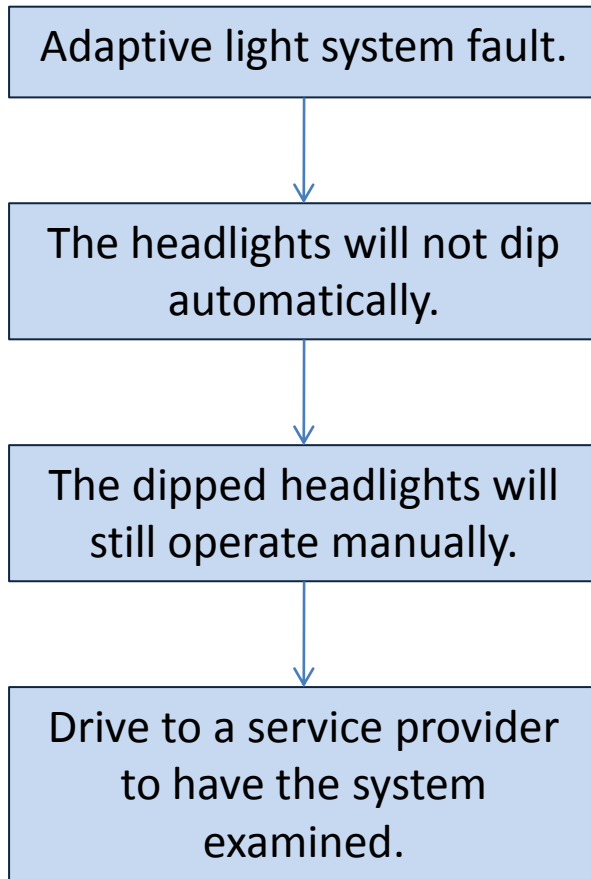


Y20

Towing hitch.

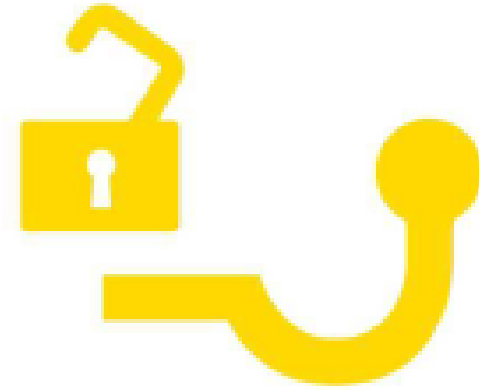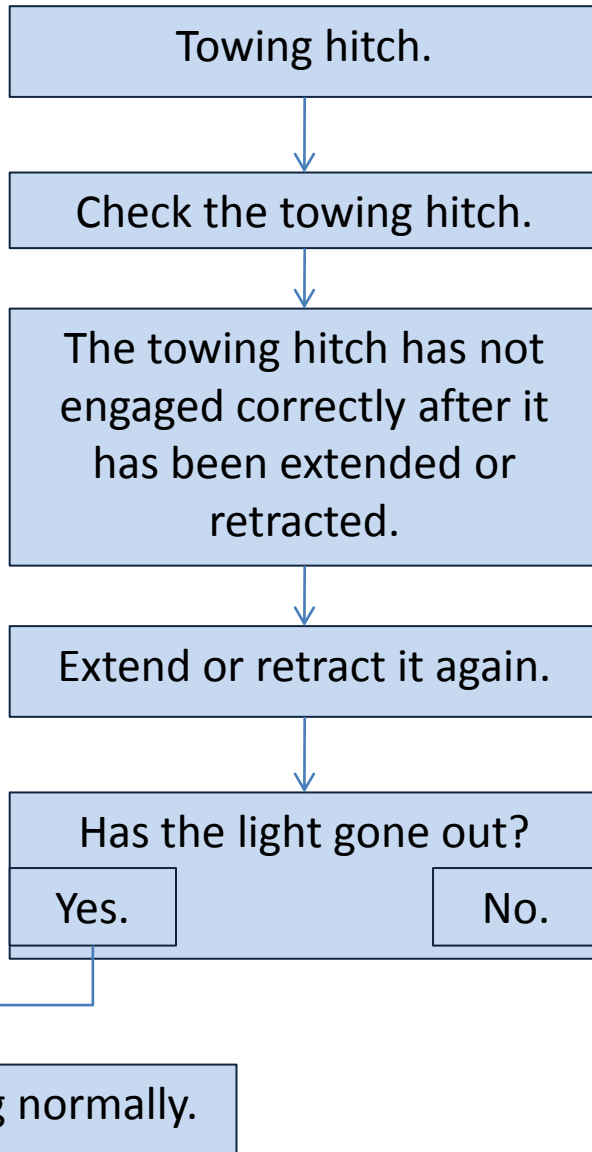


Y21

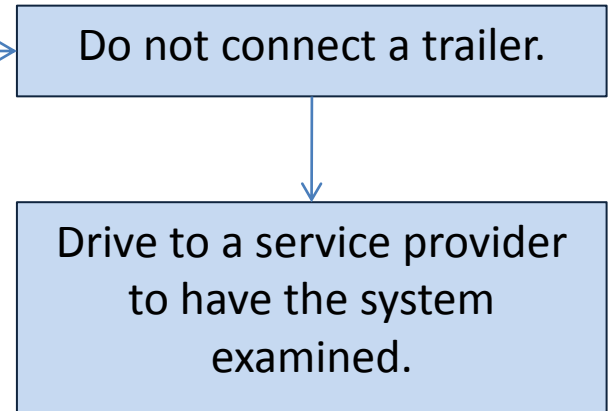

Convertible roof.



Y22

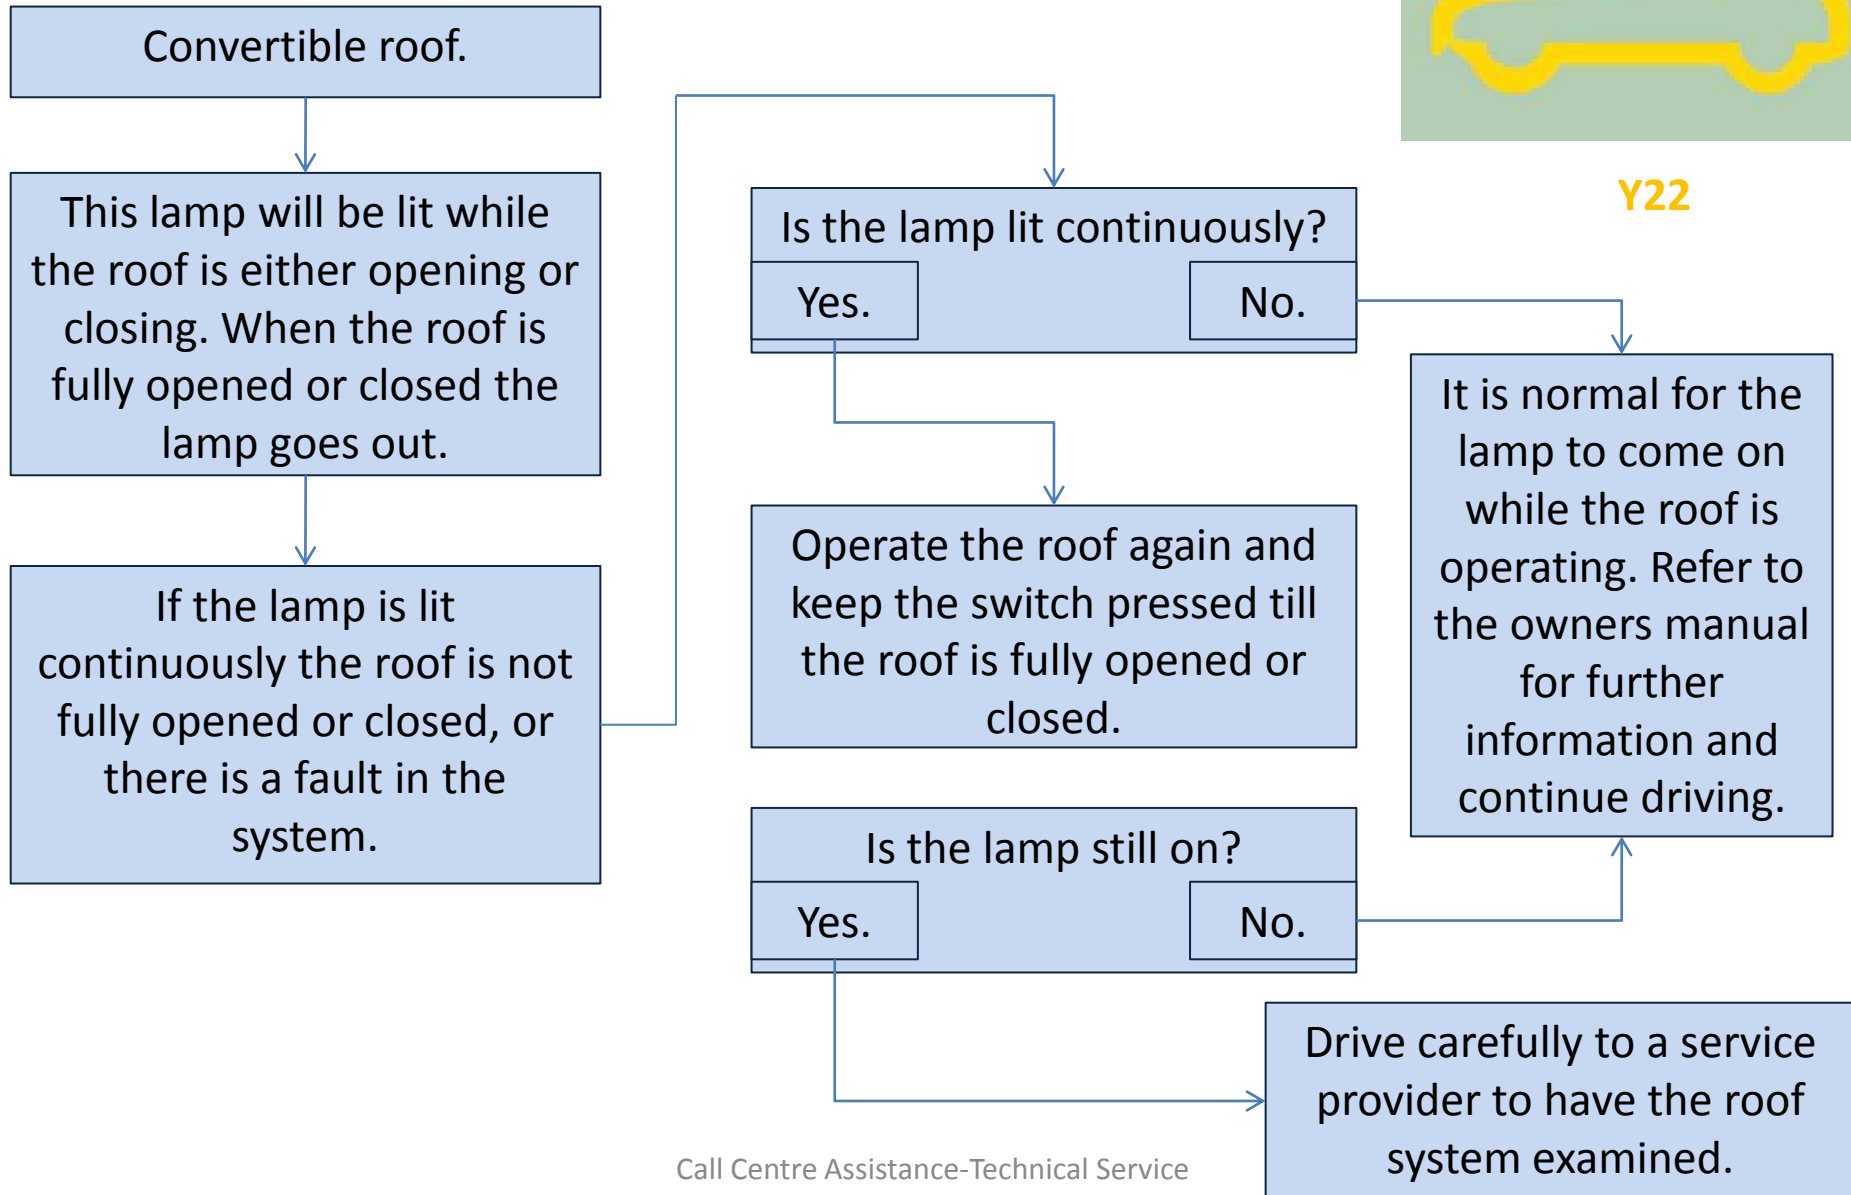

Key not in vehicle.

Key not in vehicle. This only applies to vehicles that are equipped with a keyless entry system.

This lamp will come on if the key has been removed from the vehicle while the engine was running.

Ensure the key is located inside the vehicle. It will not be possible to restart the engine if the key is not inside the vehicle.

Refer to the owners manual or contact a service provider for an explanation of the operation of the system.



Y23

Press brake pedal.



Y24

Lane assist.

This indicator lamp comes on when the lane assist system is switched on and road markings cannot be detected.

This is a normal operating feature of the system.

If this indicator lamp comes on accompanied with the message “**system fault**”, there is a malfunction in the system.

Drive without delay to a service provider to have the system examined.

Press clutch pedal.

Press clutch pedal.

The clutch pedal needs to be pressed and held while the engine is being started.

Refer to the owners manual or contact a service provider for an explanation of the operation of the system.



Y25

Windscreen washer fluid level.

Windscreen washer fluid.

The windscreen washer fluid reservoir is nearly empty.

Top up the fluid for the windscreen washer (refer to the owners manual or seek professional assistance).



Y26

Rear fog lights.




Y27

This warning lamps signifies to the customer that the rear fog lamp is switched on.

Only operate the rear fog lamp in foggy conditions to avoid dazzling the traffic behind.

Low fuel level.

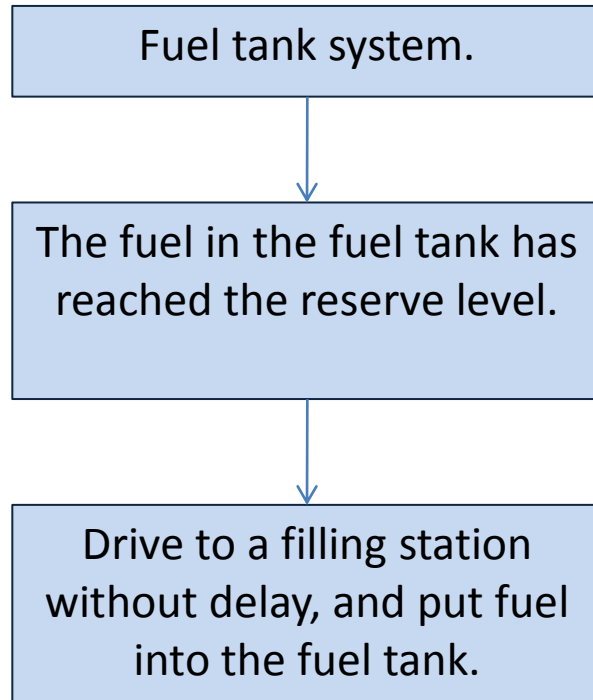

Y28

Cruise control.

Cruise control lamp.

The cruise control lamp comes on when the cruise control system is activated. This is a normal operating feature of the system.

Refer to the owners manual or contact a service provider for an explanation of the operation of the system.



G1

Press brake pedal.

Press brake pedal.

This lamp only applies to vehicles that are fitted with an automatic transmission.


The brake pedal needs to be pressed and held while the gear lever is moved out of the park position.

Refer to the owners manual or contact a service provider for an explanation of the operation of the system.



G2

Lane assist.

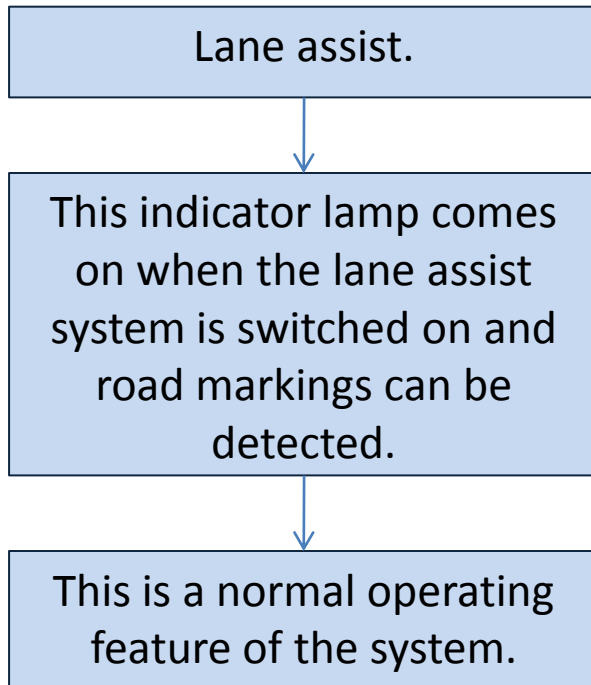


G3

Adaptive cruise control.

Adaptive cruise control operating lamps.

The adaptive cruise control operating lamps come on when the cruise control is activated. This is a normal operating feature of the system.

Refer to the owners manual or contact a service provider for an explanation of the operation of the system.

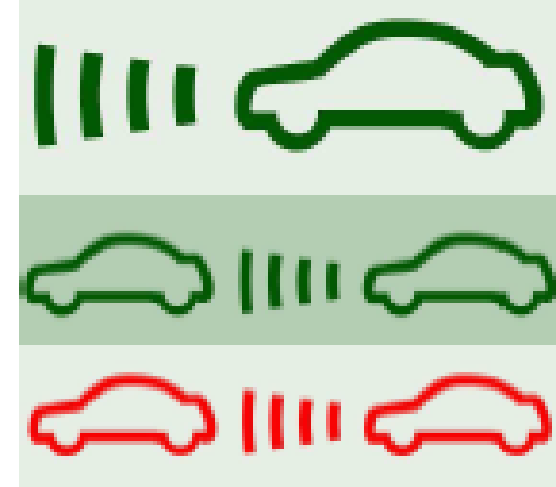

G4